

UTTERMOST

ASSEMBLY INSTRUCTIONS



STYLE#: 21563

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF. Follow the steps below for assembly.
3. Adjust the length of wire needed for your installation, remove excess. Determine the number of **Rods** to be assembled to the **Fixture Body** as needed for your hanging height. Pull the Supply Wire with Ground Wire through the selected **Rods** and **Swivel**. Thread the **Rods** & connect **Nipple**. Hand tighten.
4. Pass the supply wire through the **Universal Bar** assembly, secure the **Universal Bar** to the Outlet Box with Outlet Box Screws.
6. Fasten the **Universal Bar** to the **Canopy**. Thread **Mounting Screws** to secure it. Tighten until snug with screwdrivers.
7. Connect the wire as shown.
 - a. Connect the House Ground Wire to the Fixture Ground Wire, secure with wire nut.
 - b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side), secure with wire nut.
 - c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side), secure with wire nut.
 - d. Carefully stuff all of the connected wires into the Outlet Box.
8. Slide **Glass Shade** over **socket** and thread **Socket Collar** onto **Part A** to secure the **Glass Shade**. Tighten until snug.
9. Install correct **Bulbs** referring to fixture markings and/or labels for maximum wattage.

Your installation is completed now. Restore electricity.

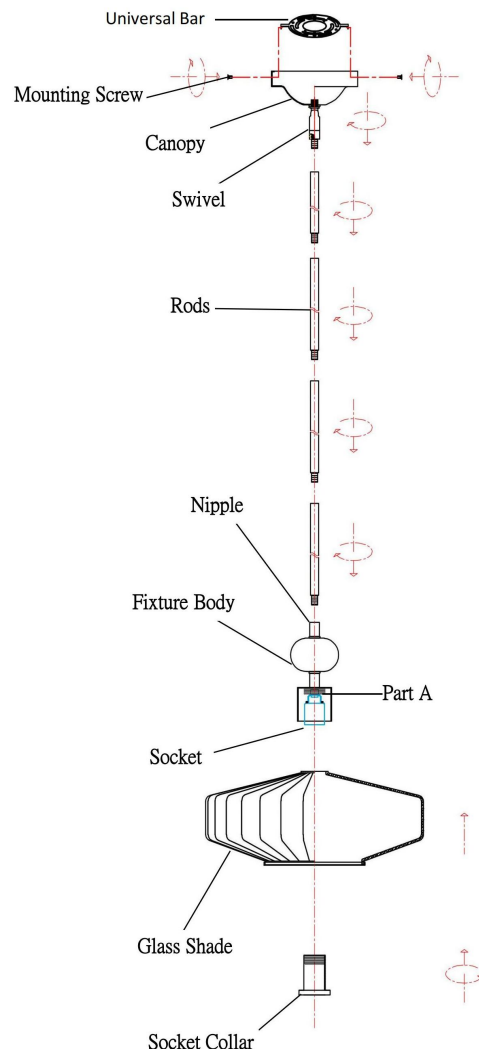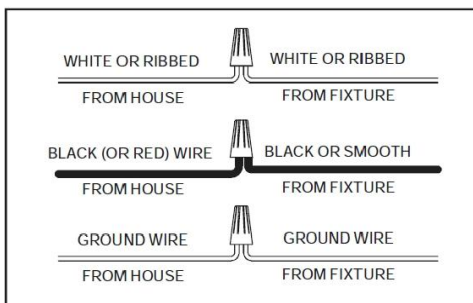

21563

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com