MANUFACTURERS OF WALL DECOR, LIGHTING,
 DECORATIVE ACCESSORIES AND ACCENT FURNITURE

 UTTERMOST

 UTTERMOST

 ASSEMBLY INSTRUCTION ITEM: 23307

 PARTS LIST

 DRAWING
 PARTS NAME
 Q'TY
 NO
 PARTS NAME
 DRAWING
 Q'TY

1

2

BACK FRAME

SEAT CUSHION

3 LEFT SIDE STRETCHER

1PC

1PC

1PC

D Q LOCK WASHER \$\phi1/4" 9PCS 4 RIGHT SIDE STRETCHER E S FLAT WASHER \$\ph1/4"*3/4" 9PCS 5 CROSS BAR F ALLEN WRENCH 1/4" 1PC 6 FRONT LEG G WOOD SCREW #8*1-1/2" 6PCS ASSEMBLY BOLTS MAY NEED TIGHTEND AFTER		
F ALLEN WRENCH 1/4" 1PC 6 FRONT LEG	1PC	
	1PC	
G (REW #8*1-1/2" 6PCS ASSEMBLY BOLTS MAY NEED TIGHTEND AFTE	2PCS	
	R USE	
STEP:1 Put the Back Frame (1) and Seat Cushion (2) together, use one Short Bolt (S) to fix the Back Frame (1) and Seat Cushion(2)in the Center, and use four Long Bolts (L) to fix the two back legs. Do not tighten All the Bolts until Step (5) is		

4PCS

1PC

4PCS



BOLTS DIA \$\$\phi1/4"*2-1/2"\$

BOLTS DIA Ø1/4"*1-3/4"

BOLTS DIA $\phi 1/4''*3-1/4''$


NO

Μ


S

L

()

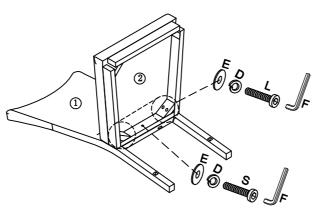

STEP:2 Attach the two Front Legs(6) into the holes on the Seat Cushion (2) and use four Medium Length Bolts(M) to fix. Please note that the Left Leg label in Blue goes into the Hole label in blue, and Right Leg label in Red goes into the Hole label in Red. Do not tighten All the Bolts until Step (5) is completed.

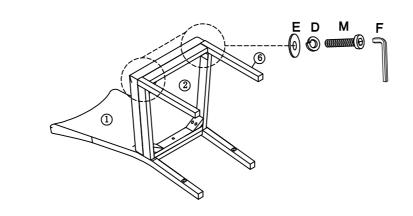


PO BOX 558/3325 GRASSY HILL RD.ROCKY MOUNT , VIRGINIA 24151 WWW.UTTERMOST.COM



UTTERMOST ASSEMBLY INSTRUCTION

ITEM:23307

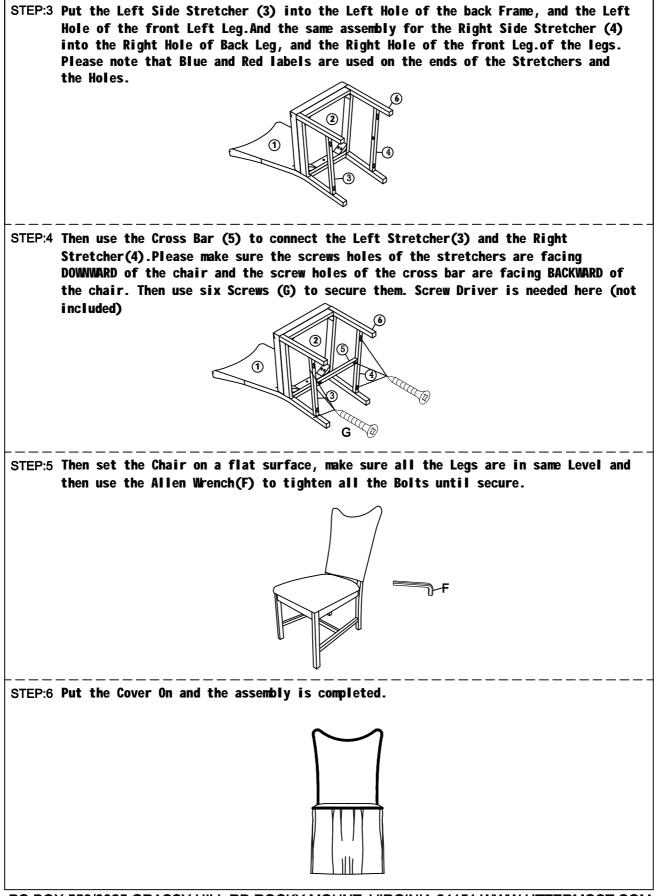

PO BOX 558/3325 GRASSY HILL RD.ROCKY MOUNT , VIRGINIA 24151 WWW.UTTERMOST.COM