




UTTERMOST

## Assembly Instruction

### 24955

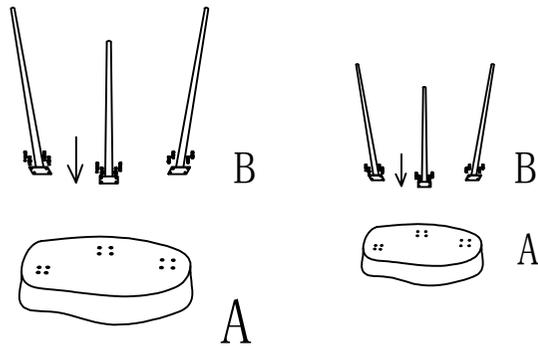

1. Take the TOP A carefully out of the carton, and place it upside down on a flat surface, make sure that the TOP A will not be damaged.

2. Take the legs B out of the carton and fix legs B to TOP A piece by piece.

Hardware and tool included: allen screws, allen wrench, washers.



		
x1	16mmx24	20mmx24

To clean, wipe with soft dry cloth.