



2*60W,TYPE A
(NOT,INCLUDED)

ASSEMBLE INSTRUCTION STYLE NO.:28253-1

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Screw the part A to the lampholder.
3. Place the finial disc and shade onto the harp, then screw the finial clockwise onto harp until shade is secure.

CAUTION:IN ACCORDANCE WITH THE UL REGULATION. THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUAL TO 4", "R" IS NOT SMALLER THEAN 3-1/2" OR MAY CAUSE FIRE."H" IS 3-1/4"
TO clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY

