



## ASSEMBLY INSTRUCTIONS 28587-1

## UNPACK ALL LAMP PARTS ON A SOFT, SMOOTH SURFACE-INVENTORY ALL PARTS

Parts List: •Allen Wrench •Part A Base •Part B Base •Shade

**STYLE#:** 

- 1. Place Part A base in an upright position on the floor.
- 2. Position Part B into Part A as shown in the diagram, pulling excess cord where it exits on Part A. Use the Allen-wrench provided to tighten (turn clockwise) all four set screws at the top of Part A. The set screws are pre-installed in Part A.
- 3.Remove socket collar from the socket by turning counter clockwise. Position the shade on the socket then thread the socket collar (turn clockwise) onto the socket.Hand tighten only,being careful not to over tighten.

4.Use 1 Type A on-off 150 Watt bulb , not included.


## **IMPORTANT SAFETY INSTRUCTIONS**

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

## CARE AND MAINTENANCE

To clean wipe with a soft, dry cloth.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com

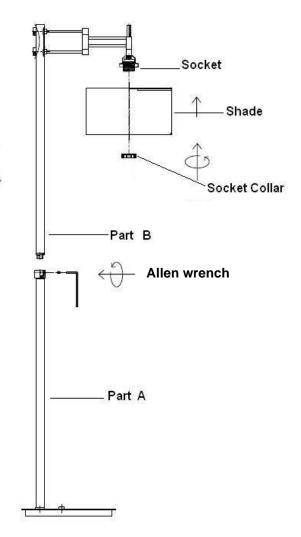

RTG28587-1-CD