CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

 * Please make sure that you have all parts indicated before you begin assembly of this item

* This item should be assembled on a soft surface to prevent scratching the finish during assembly

* This item may require periodic tightening


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Backrest		1X
В	Chair Leg	di na	4X
С	Footrest	\bigcirc	1X
D	Apron with swivel plate		1X
E	Cushion seat	\bigcirc	1X
1	JCBC Screw M6x25mm		4X
2	JCBC Screw M6x35mm		8X
3	JCBC Screw M6x40mm		8X
4	JCBC Screw M6x45mm		6X
5	Spring Washer M6x10mm	Ø	22X
6	Flat Washer M6x13mm	\bigcirc	16X
7	Flat Washer M6x16mm	O	10X
8	Allen Key Small M4		1X



Model# FOX7012

Product Dimensions:20" W x21.25" D x 38" H 22.25" W x22.75" D x 42.75" H

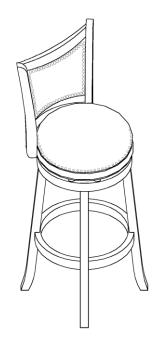


PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

Tools Required for Assembly (included): Allen Key

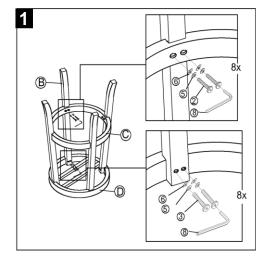

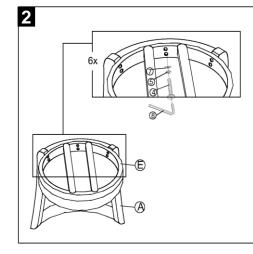

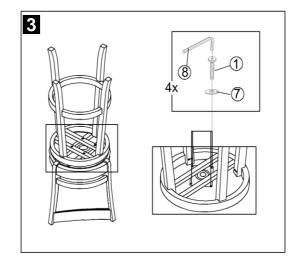

Step 1

Attach front leg-1 (B)front leg-2(C) to chair (A) using Allen bolt L(H1), flat washer (H4), and Spring washer (H3),Tighten with allen key (H5)

Step	2



Attach rear legs (D) to chair (A) using allen bolt (H Stick the bottom fabric to the chair. flat washer (H4),and Spring washer (H3), Tighten with allen key (H5)