

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: LED 46W

Compatible Dimmer Switches: Lutron DVELV-300P or Lutron SELV-300P.

Estimated Assembly Time: 20-30 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Package Contents

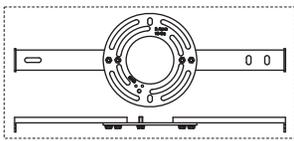


A Crossbar
x 1

B Mounting Screw
x 2

C Wall Anchor
x 2

D Self-tapping
Screw
x 2

E Washer
x 2

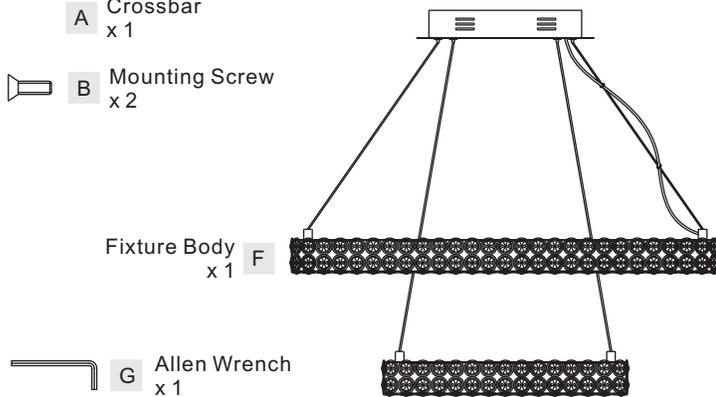


F Fixture Body
x 1

G Allen Wrench
x 1

STEP 2 – Adjust Fixture Height

- Unlock Set Screw on the Rope Clamp by using the Allen Wrench (G).
- Push the Pin underside of the Ceiling Canopy, adjust the Steel Cable in or out of the Ceiling Canopy to achieve your desired hanging height. Once your desired hanging height is achieved, move the Rope Clamp close to hex nut inside of the Ceiling Canopy, and then tighten the Set Screw with the Allen Wrench (G).
- Use the same process to adjust all Steel Cables to level each ring.
- Adjust the Wire in or out of the Ceiling Canopy to make sure there are no slack wires between Ceiling Canopy and Rings. Move the Slider on the Wire next to inside surface of the Ceiling Canopy.

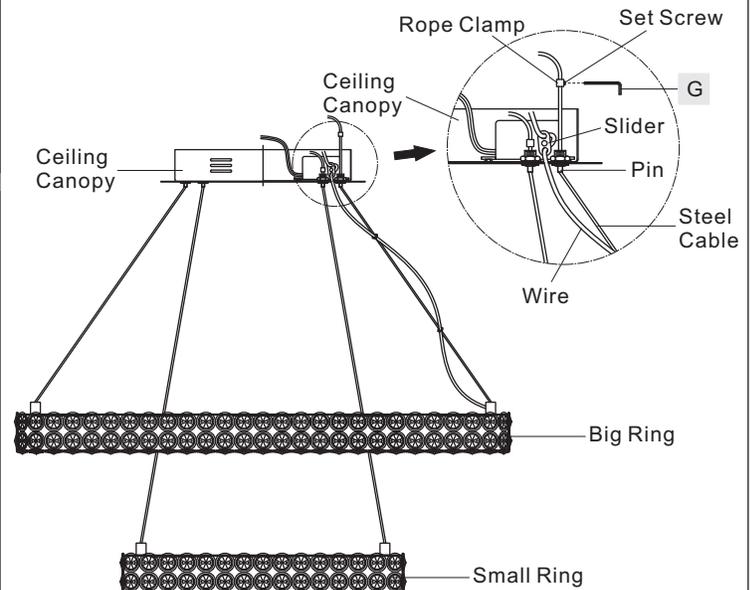

STEP 1 – Attach Crossbar to Outlet Box

- Attach the Crossbar (A) onto the outlet box and make two marks on the ceiling from keyholes.
- Remove the Crossbar (A) and drill proper holes on the ceiling from marks. Insert Wall Anchors (C) into the holes properly. Pass supply wires and ground wire through the center hole of the Crossbar (A). Attach the Crossbar (A) to outlet box. Thread outlet box screws (not supplied) into mounting holes on the outlet box. Pass Washers (E) over Self-tapping Screws (D) and thread Self-tapping Screws (D) into Wall Anchors (C). Hand tighten until snug.

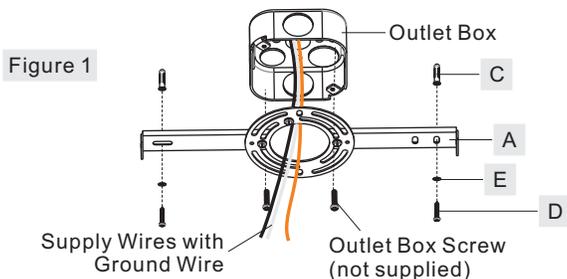


Figure 1


Figure 2

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoizel.com

STEP 3 – Making the Wire Connections

- A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.
- B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into outlet box.


Note: If the electrical wire is going to be cut shorter than provided you will need to identify the "L" line wire and the "N" neutral wire before you cut the excess wire off. One is labeled N and the other labeled L. To do this separate the "L" line wire and the "N" neutral wire as far as you need to. Re-label the wire near where you want to make the cut. Be sure to mark the wire on the side of the fixture and not on the excess wire being cut and removed.

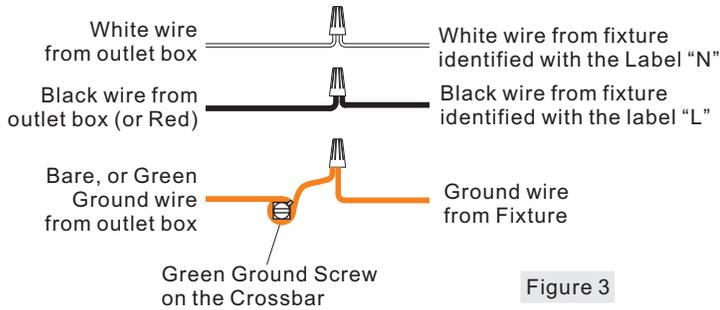

STEP 4 – Attach Fixture Body to Crossbar



- A. Fit excess cord and electrical wires in the ceiling canopy of Fixture Body (F) properly. Line up the holes on the side of the Ceiling Canopy of Fixture Body (F) to the mounting holes on the Crossbar (A). Secure them with Mounting Screws (B). Tighten until snug.

The fixture is now assembled and ready to use. Enjoy!

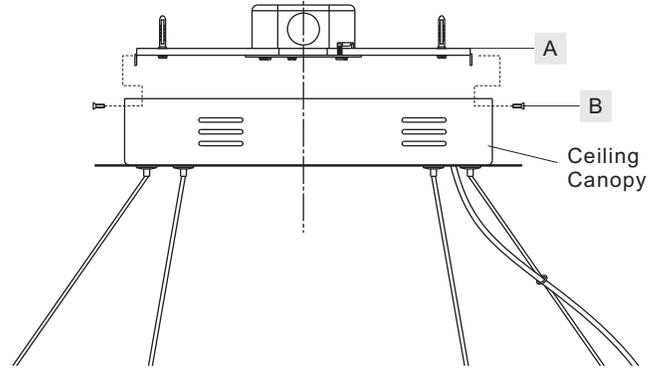


PCIN1828C

FINISH: POLISHED CHROME

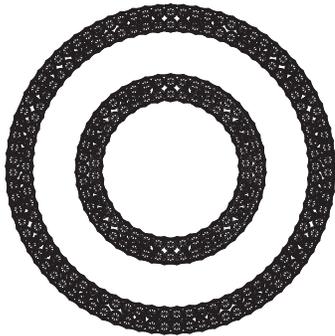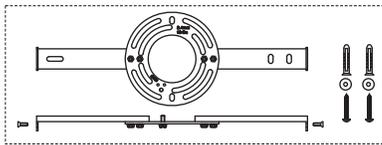

TOP VIEW

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

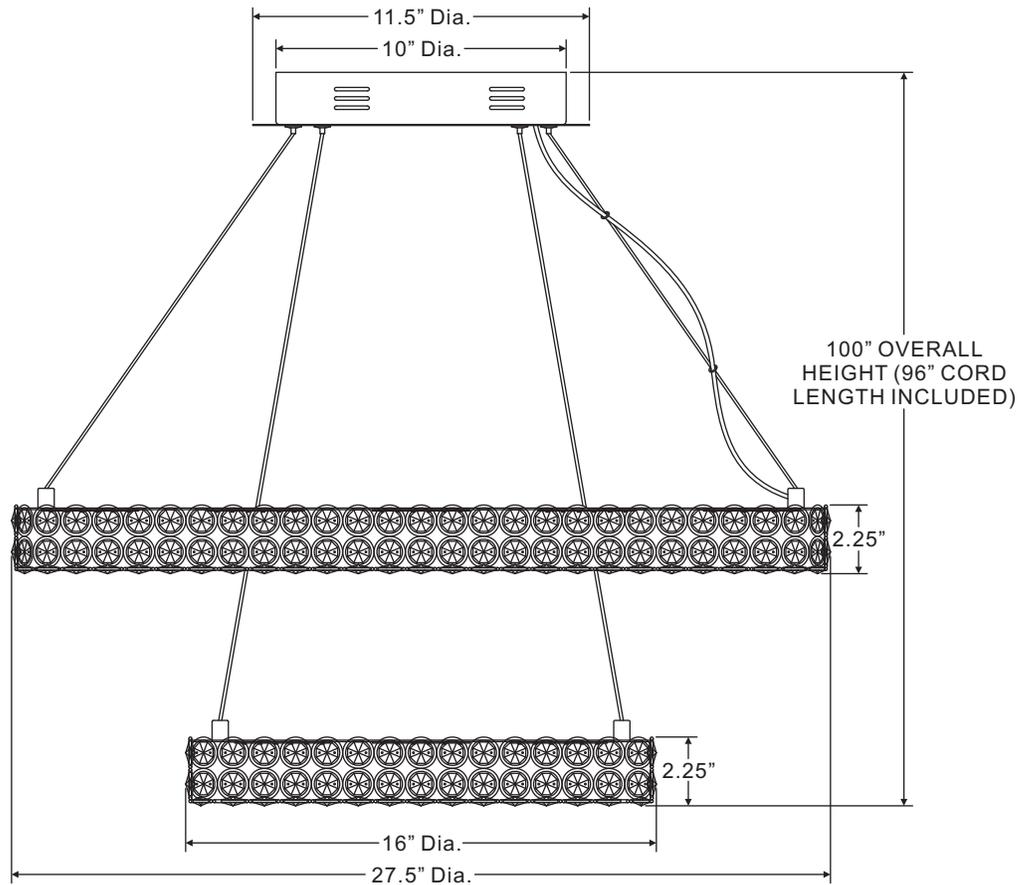

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-800-645-3184
or visit us on-line at www.quoise.com