 
 


Tools Required

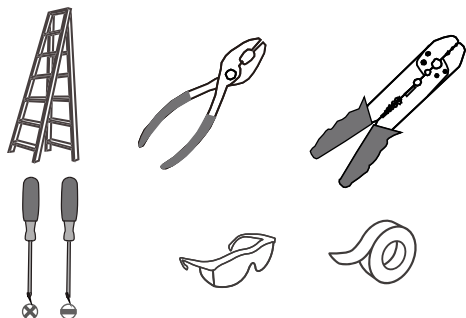

Light Source

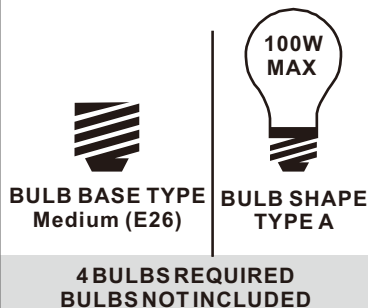

Fixture Height Adjustable 14.25" to 46.5"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

 
Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG

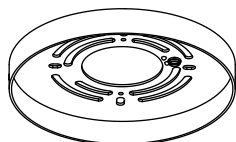

A Inner Backplate
x 1



 
B Mounting Screw
x 2



C Outlet Box Screw
x 2



D Wire Connector
x 3

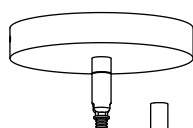


E Ceiling Canopy
Assembly
x 1



F 6" L Rod
x 2



 G 12" L Rod
x 2

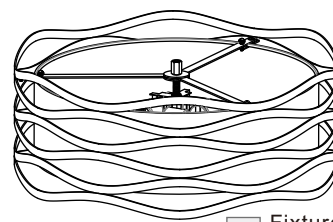

H Fixture Body
x 1



I Diffuser
x 1



J Rubber Washer
x 1




K Flat Washer
x 1




L Finial
x 1

Table of Contents

 
Ceiling Canopy Assembly & Downrod

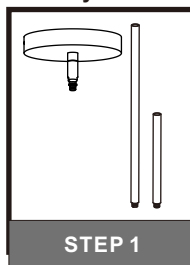


Crossbar Assembly

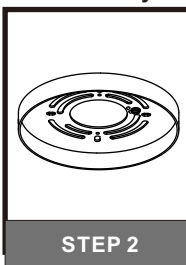 


Wiring

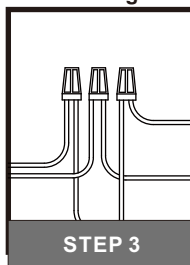 


Ceiling Canopy

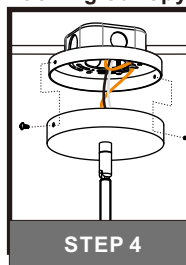 

Bulb

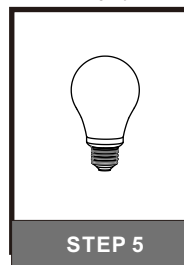 

Diffuser

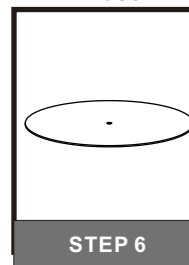 

STEP 1

OPTION 1

 
Pendant — PCMC2820C

Optional Rods

8' ceiling:
(2) 12"L rods
9' ceiling:
(2) 6"L + (2) 12"L rods


1

Install rods

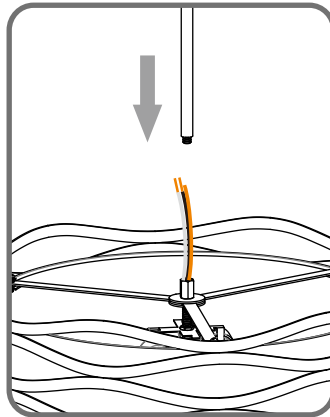



2

 Tighten hex nut inside of the ceiling canopy

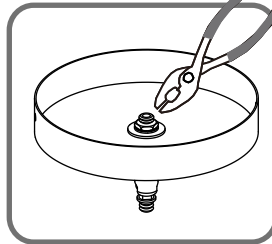

3

  Install Ceiling Canopy

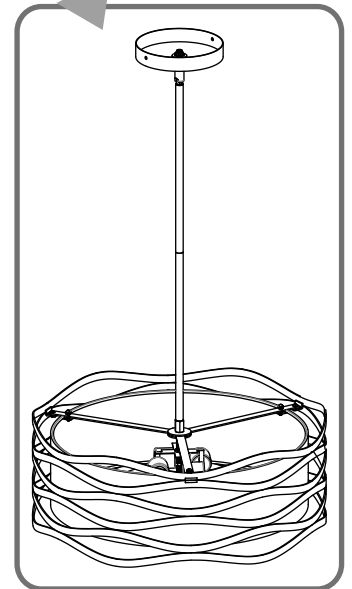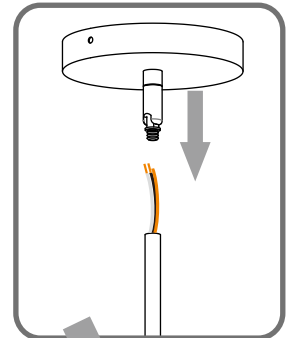


OPTION 2

Semi-flush — PCMC1720C



1

 Remove swivel


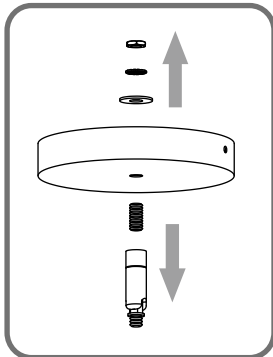


2

  
Install (1) 6"L rod and ceiling canopy

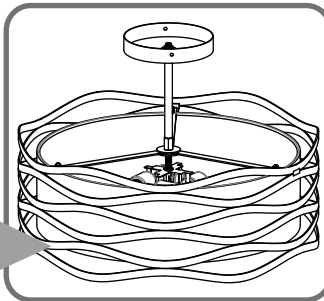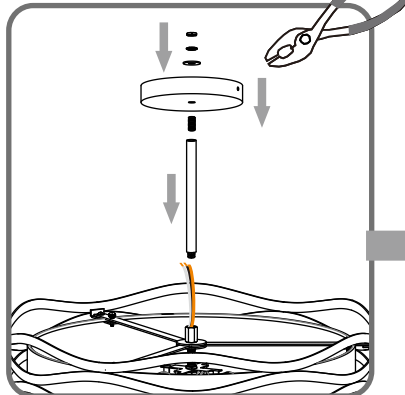

  
STEP 2

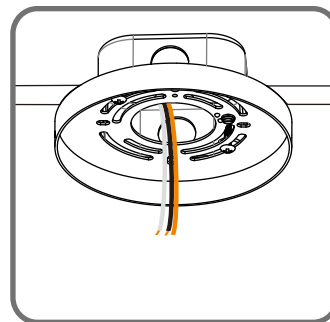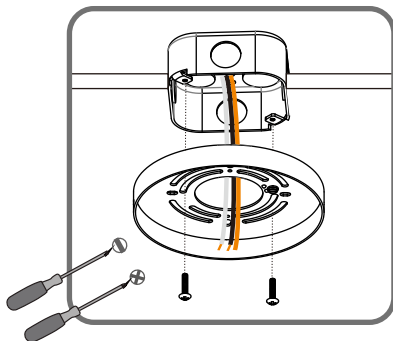

 STEP 3

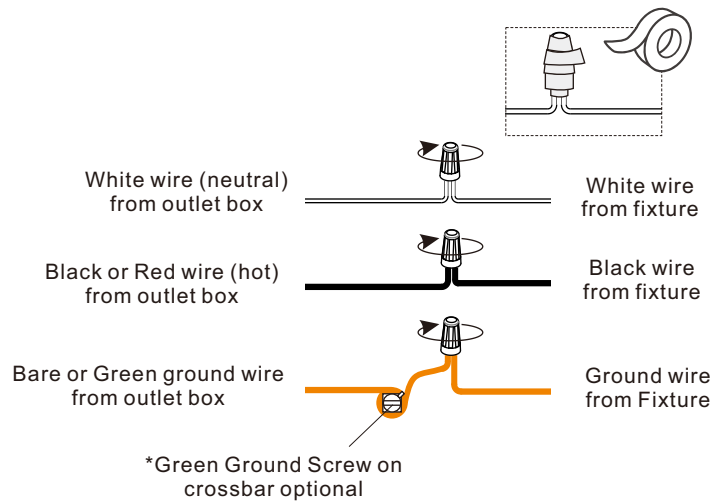


 STEP 4

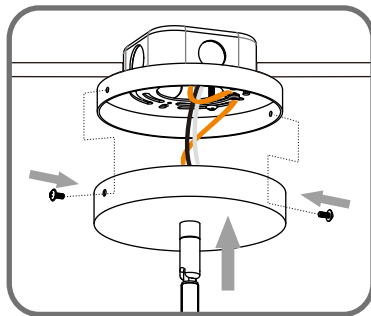


OPTION 1

 PCMC2820C

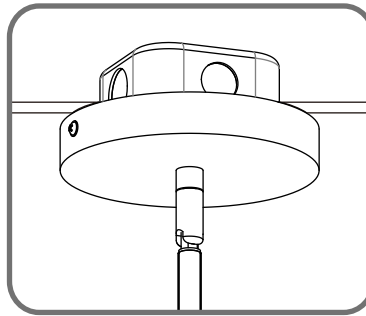


OPTION 2

 PCMC1720C

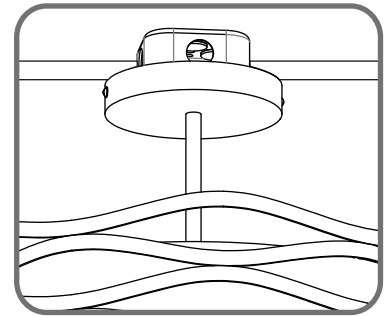


 STEP 5

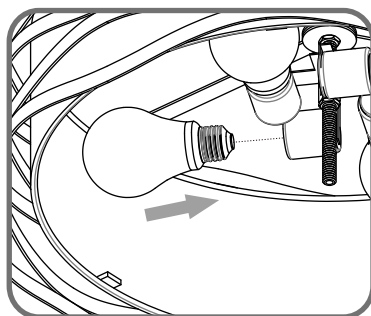


OPTION 1

 PCMC2820C

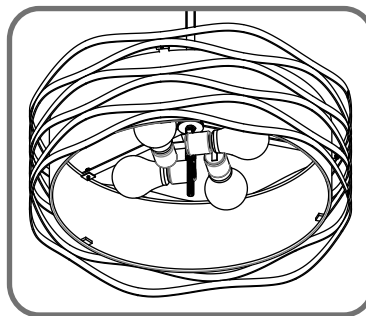

OPTION 2

 PCMC1720C

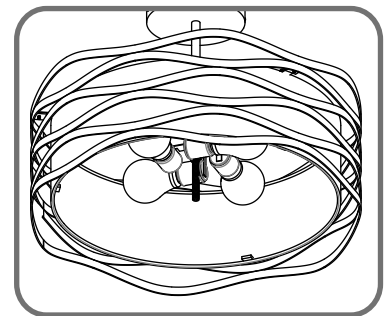

STEP 6

OPTION 1

PCMC2820C

OPTION 2

PCMC1720C

