


## ASSEMBLY INSTRUCTIONS

### 132592

Read and follow all instructions before assembling and using this product.  
Keep these instructions in a safe place for future reference.

**Assemble components of this fountain on a smooth, clean surface to avoid scratching or damaging the finish.**

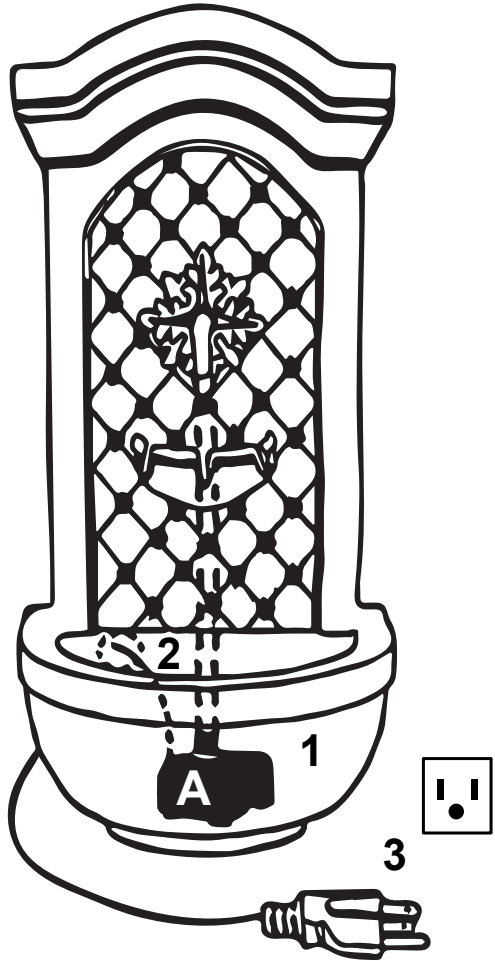

- Connect the tubing that is built into the fountain to the recirculating pump (A). Ensure the pump adapter is firmly secured inside the tubing and the pump. (fig. 1)\*\*
- Run the pump power cord through the opening in the back of the fountain. (fig. 2)
- Fill the fountain with sufficient water to fully submerge the pump.
- Plug the power cord into an electrical outlet. (fig. 3)

\*\*If you purchased the Solar or Solar-on-Demand wall fountain, attach the pump from the solar panel kit and run the cable(s) through the opening in the back of the fountain; read and follow the instructions included with the solar panel kit for operation and care of the solar pump kit.

To purchase a compatible Solar or Solar-on-Demand pump & panel kit, contact us using any of the contact methods mentioned in the warranty section. Provide fountain number (132592) to help expedite your request.

### **IMPORTANT CARE INFORMATION**

- Fill the fountain with sufficient water to ensure the pump is fully submersed; never allow the fountain pump to run dry as this will cause damage and invalidate the warranty.
- Clean and add water on a regular basis.
- Always shut off the power supply before cleaning and maintaining the fountain and recirculating pump.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form inside the fountain will damage the fountain and invalidate the warranty.

### **TROUBLESHOOTING**

**Water is not flowing within several moments of the power supply being plugged in/turned on.**

- Check to make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.
- Check the pump and tubing for any form of obstructions.
- Check the flow control on the body of the pump as it may need to be adjusted to acquire the desired flow rate.

**Water is flowing or circulating slowly.**

- Ensure that the pump is fully submersed and add water to the basin if necessary.
- Check the flow control on the body of the pump as it may need to be adjusted to acquire the desired flow rate

**There is an abnormal sound when plugging in the pump.**

- Unplug the power supply for a few moments and plug it back in; the pump may have air bubbles in the filter which can prevent water from circulating properly.
- Ensure that the pump is fully submersed; the fountain may need additional water once it has begun circulating through the fountain.

**Over time, the paint finish will gradually mellow in color, this is part of the natural aging process.**