

# DOUBLE TIER CERAMIC OUTDOOR FOUNTAIN WITH LIGHTS SSS-602

Read the assembly instructions carefully and follow the care instructions. Keep these instructions for future reference.

**Select a smooth, level surface to place the fountain.**

**Assemble components on a soft, clean surface to avoid scratching or damaging the finish.**

| PARTS                                     | QTY. |
|---|------|
| Topper                                    | 1    |
| Small Tier with LED Light Ring            | 1    |
| Column                                    | 1    |
| Large Tier with Electric Submersible Pump | 1    |
| AC Adapter                                | 1    |
| Pedestal                                  | 1    |
| Water Tube                                | 1    |
| Rubber Washer                             | 1    |




Inspect packaging to ensure all parts are accounted for before disposing of packing materials.




2-PERSON ASSEMBLY RECOMMENDED

**NOTE:** There is a polyurethane foam filter/splash guard inside the topper, *do not remove or discard the filter/splash guard*. The filter helps control water flow to prevent splashing.

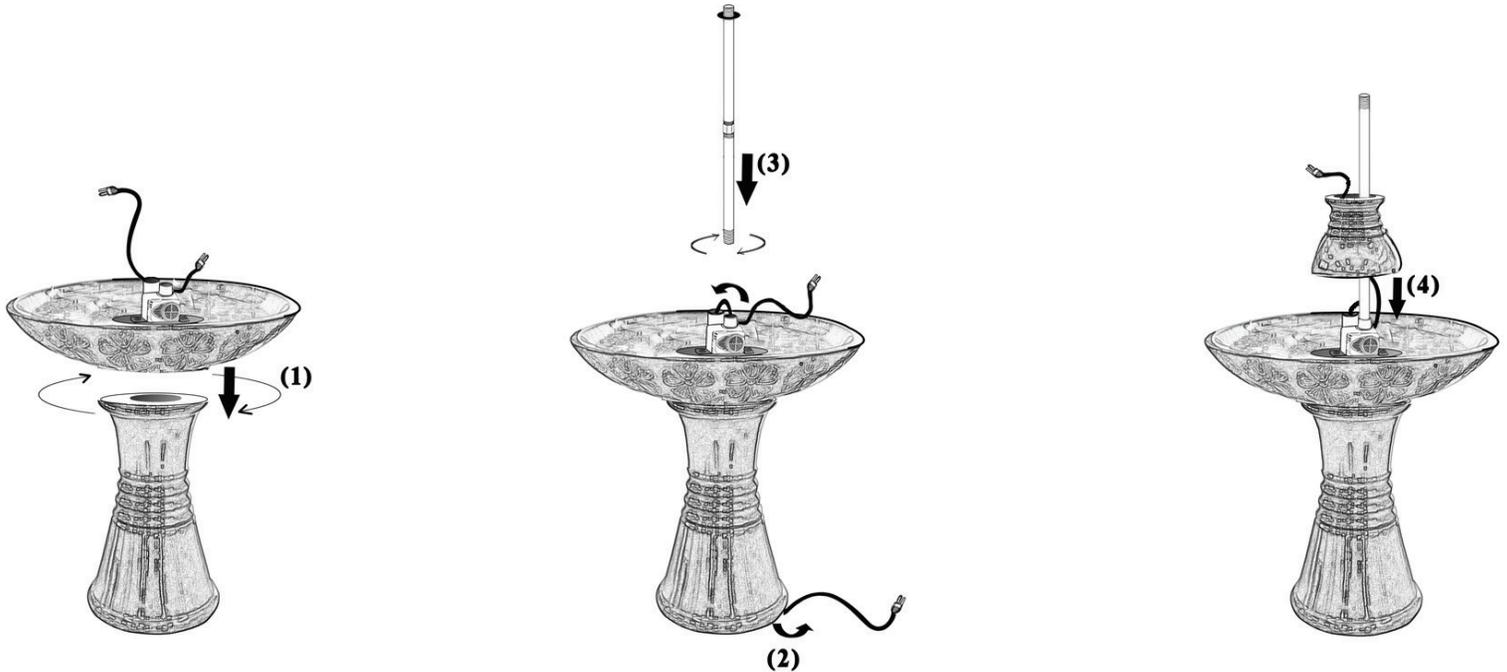

## ASSEMBLY

- Place the large tier with the pre-attached electric submersible pump onto the pedestal and twist to lock into place.
- Run the longer cable that is attached to the through the tube in the large tier and pedestal. Make sure the power cable is under the groove on the bottom of the pedestal.
- Attach the water tube to the pump, making sure the end with the rubber washer is on top. Remove the rubber washer and save it for use during Step 7.
- Slide the column over the water tube and gently place it on the large tier. Run the light cable (attached to the pump) up through the column.

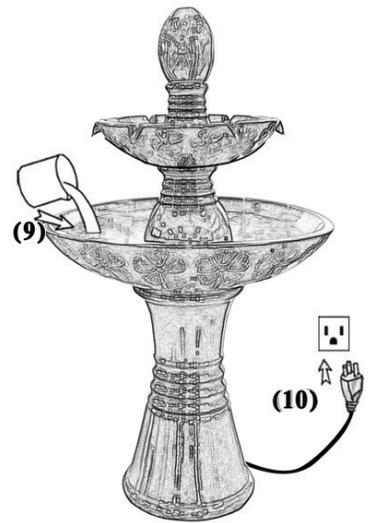

5. Slide the small tier over the water tube and firmly connect the light cable to the short cable on the pump.
6. Gently place the small tier onto the column, ensuring all cables are inside the fountain. Do not allow the cables to get caught/pinched between the tiers as this can damage the wires.
7. Place the rubber washer (from step 3) on the water tube. Twist the topper onto the water tube until it is secure; do not over-tighten.
8. Firmly connect the pump power cable to the AC adapter.
9. Fill both tiers with enough water to keep the pump fully submerged during operation.
10. Plug the power cord into a properly grounded GFCI outlet.

**Note:** When first used, there may be air in the pump. It may take several minutes for trapped air to escape, allowing water to flow. You may need to add more water as the pump begins to circulate water through the fountain.

## ⚠ IMPORTANT INFORMATION ⚠

### USE & CARE

- For outdoor use only.
- Some splashing is normal; adjust the flow rate on the pump if the water rate is too high.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required, avoid heavily chlorinated water as it may damage the fountain or pump.
- Periodically change the water to keep the fountain and pump clean. Remove scale and buildup regularly.  
DO NOT use harmful additives such as bleach, chlorine, etc.  
DO NOT use a pressure washer or abrasive materials to wash the fountain.
- Always shut off the power supply before cleaning and maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.
- During freezing weather, drain the fountain, disconnect the pump and store indoors; allowing ice to form may damage the fountain in such ways as, but not limited to, the fountain cracking, permanent pump damage, and /or lighting malfunctions.

### TROUBLESHOOTING

- Ensure that the pump is fully submerged and add water if necessary.
- If water is not flowing within several moments of the fountain being plugged in, the pump may have trapped air which can prevent water from circulating properly. Simply unplug the power supply for a few moments and plug it back in. Also check the pump and tubing for obstructions.
- If water is not flowing or water is splashing, check the flow control on the body of the pump; it may need to be adjusted to achieve the desired flow rate.
- If the light is not working, ensure the cables are fully connected and the seal is adequately tightened (do not over-tighten).
- Make sure the adapter cable is fully connected to the pump power cable.
- Make sure the power outlet is working; if in doubt about electrical connections, consult a certified electrician.

**Any modification to the product or failure to follow recommended care will void the product warranty.**

## ⚠ WARNING!

**Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.**