WARNING

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN. WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.



To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slighly damperned clean clorth (use clean water, never a solvent) to wipe the interior surface of the fixture.

Do not use any cleaners with chemical, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

NOTICE& IMPORTANT SAFETY INSTRUCTIONS

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * To reduce the risk of fire, electrical shock or injury to persons or property, please follow the guideline below for safe use and installation
- *The external flexible cable or cord of this lamp cannot be replaced If the cord is damaged, the lamp shall be destroyed

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	mounting screw		2X	F	wire		3X
В	mounting bracket		1X	G	regulator	ф	3X
С	machine screw	(C)	2X	Н	canopy	000 000 <u>_</u>	1X
D	wire connector		3X	I	lamp body	888888888888888888888888888888888888888	1X
E	driver	= 0000	1X				



Model#: JYL7201A

Product Dimensions: 24.75 x 24.75 x

21.5"

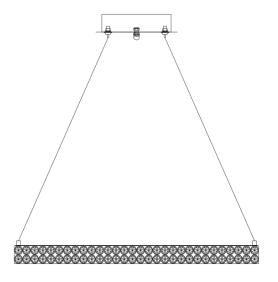


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list ar hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 20 minutes.

- 1. Take out machine screw (A) and mounting bracket (B) from canopy (H)
- 2. Fix the mounting bracket(B) to the outlet box with machine screw(C).
- 3. Make wire connections, with wire connectors(D), following the reference chart listed below.

Connect, Hot, Black or Red Outlet Supply Wire to:	Connect, Neutral, White Outlet Supply Wire to:		
Black	White		
* Parallel Cord (round & smooth)	* Parallel Cord (square & ridged)		
Clear, Brown, Gold or Black without Tracer (colored stripes)	Clear, Brown, Gold or Black with Tracer (colored stripes)		
Insulated Wire (not green) with copper metal conductor	Insulated Wire (not green) with Silver metal conductor.		

 

*Note: When parallel wire (SPT I & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See Illustration on left.)

Grounding Instructions:

- a) For installation in the United States: Wrap ground wire from outlet box around green on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.
- 4. Fix the ceiling canopy (H), so that the screws protruding from the mounting bracket go into the holes in the canopy, then secure it with the machine screw (A).
- 5. Use regulator (G) to adjust long of wire, put the wire into regulatior(G) can be shorter, press regulatior (G) and take out wire from regulator (G) can be longer.
- 6. Turn on switch, light up.



