## **CARE AND MAINTENANCE**

Store outdoor furniture indoors or cover well when not in use.

Remove wooden furniture from standing water. Dust regularly with small brush or vacuum Spills should be taken care of immediately before they harden or stain with a slightly dampened sponge.




## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly
- \* This item may require periodic tightening

## **Part List and Hardware List**

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Back panel		1X
В	Front panel		1X
С	Leg frame		2X
D	Bottom panel		1X
Е	Seat Frame		1X
H1	Hinge		2X
H2	Screw	(3) M4x15	17X
НЗ	Screw	M6x60	8X
H4	Allen key	5 mm	1X

Model# PAT7037
Product Dimensions:47.6" W x 19.5" D x 18.9" H

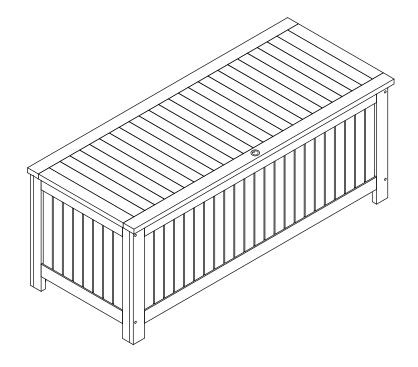


## **PREPARATION**

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 40 minutes.

Tools Required for Assembly (included): Allen Key

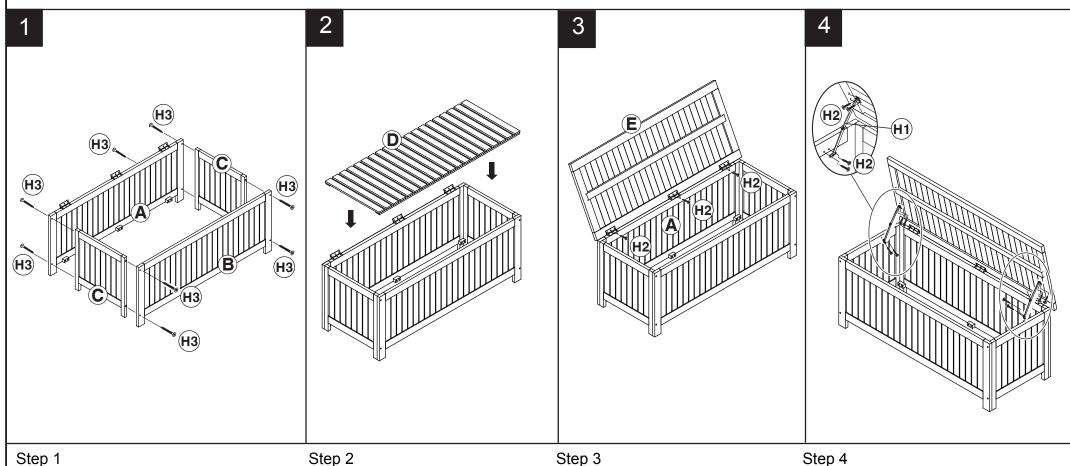

Attach font panel (B) and back panel (A) to leg frame (C) by using screw (H3), tighten with allen (H4)

Step 2 (D) Pull down as the arrow

Attach back panel (A) to seat frame (E) by using screw (H2),

Use screw (H2) to attach hinge (H1) to seat frame (E) and leg frame (C),