



CARE AND MAINTENANCE

Please follow these cleaning and care instructions in order to maintain the beauty of the product you have selected, and to preserve your warranty.

All finishes should only be cleaned with warm water and a mild dishwashing liquid or a non-abrasive liquid soap, and then polished with a clean, soft cloth. A microfiber cloth is gentle but effective for cleaning without scratching, and may only need to be dampened to clean the product.

Under no circumstances should rough, abrasive, or acidic cleaners be used. DO NOT use harsh abrasives, scouring pads, steel wool, or metal cleaners, as they may damage the surface. Avoid impacting the product with sharp or heavy objects such as knives, pans, or cooking pots. Avoid contact with abrasives.