



58" Dancing Mrs. Claus w/ Stocking & Candy Cane



Holding a stocking full of goodies and a candy cane, our dancing Mrs. Claus will be a delightful addition to your holiday decor in any home, office or store. When motion is detected, she will move her arms and sway her body to the music.

Dressed in a festive white apron over a red velvet dress with a matching mob-cap, her friendly face and warm smile will fill you and yours with holiday cheer! Pair her with our Dancing Santa in his matching suit for an extra special display (Santa sold separately).



- 58" motion activated dancing Mrs. Claus
- Matching dancing Santa sold separately (model # FASC058-2RD1)
- Dances when motion is detected up to 5 feet
- "Ding Dong Merrily on High" plays while she moves
- 6-ft. power cord uses standard 115V electrical outlet

Model Number	UPC	Dimensions	Description
FAMC058-2RD1	192487239025	21.3" x 15" x 58"	Dancing Mrs. Claus in Baker's Outfit w/ Stocking



58" Dancing Santa w/ Gingerbread Boy & Candy Cane



Holding a gingerbread boy and a candy cane, our dancing Santa will be a delightful addition to your holiday decor in any home, office or store. When motion is detected, he will move his arms and sway his body to the music.

Dressed in a festive white apron over a red velvet suit with a matching Chef's cap, his friendly face with chubby cheeks will fill you and yours with holiday cheer! Pair him with our Dancing Mrs. Claus in her matching outfit for an extra special display (Mrs. Claus sold separately).



- 58" motion activated dancing Santa Claus
- Matching dancing Mrs. Claus sold separately (model # FAMC058-2RD1)
- Dances when motion is detected up to 5 feet
- "Jingle Bell Rock" plays while he moves
- 6-ft. power cord uses standard 115V electrical outlet

Model Number	UPC	Dimensions	Description
FASC058-2RD1	192487239117	21.3" x 15" x 58"	Dancing Santa in Baker's Outfit w/ Stocking