 


INSTRUCTIONS FOR MODELS

VS-3023 -E2 -E175 -E15



NEED HELP?

For additional assistance or service please contact:

SPEAKMAN® Company
400 Anchor Mill Road
New Castle, DE 19720

800-537-2107

 
customerservice@speakman.com

www.speakman.com

92-VS-3023-02

TOOLS AND SUPPLIES

Thread Seal
Tape
(included)



IMPORTANT



Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur. This hand shower has an optimal operating range of 20-80 psi.

SAFETY TIPS

Cover your drain to prevent loss of parts.

MAINTENANCE

Periodic cleaning using a mild soap and warm water will help keep your Hand Shower's appearance in its original condition.

For best results, dry immediately with a soft, clean cloth. **DO NOT USE** harsh and/or abrasive cleaners.

On **CHROME PLATED HAND SHOWERS**, a two (2) part white vinegar, one (1) part water solution can be used to break down excessive mineral deposits on the sprays. Let the hand shower soak in the solution for about ½ hour then rinse thoroughly. Brush off any remaining mineral deposits if necessary.


DO NOT USE the vinegar/water treatment on any finish other than Chrome.

WARRANTY

Additional warranty information can be found at:
www.speakman.com

1


Connect the tagged side of the hose to the water supply. Hand tighten. **WATER WILL NOT FLOW THROUGH THE HOSE IF THE WRONG END IS CONNECTED.**

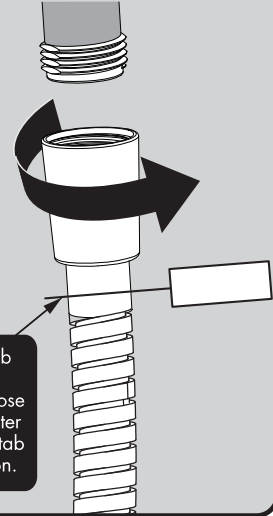

NOTE: Paper tab inserted to show this end of the hose assembles to water supply. Remove tab before installation.

2

Connect remaining end of Hose to inlet of Hand Shower. Hand tighten.

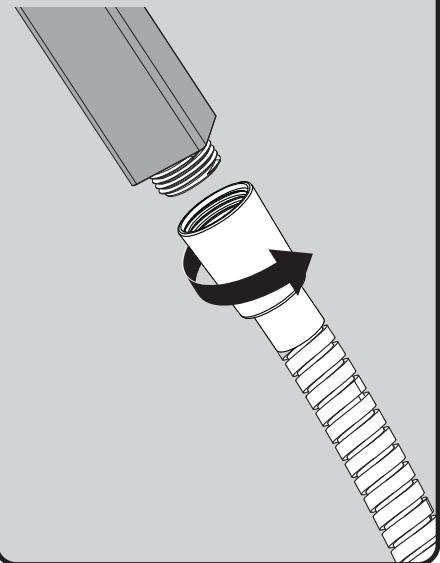

ROUG

VS-3023
Max. Flow Rate
Min. Flow Rate
FOR USE WITH
RATED AT 7.6 L

VS-3023-E2
Max. Flow Rate
Min. Flow Rate
FOR USE WITH
RATED AT 6.6 L

VS-3023-E175
Max. Flow Rate
Min. Flow Rate
FOR USE WITH
RATED AT 5.7 L

VS-3023-E15
Max. Flow Rate
Min. Flow Rate
FOR USE WITH
RATED AT 4.7 L