

|--|


Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at https://tiny.cc/SunnydazeWarranty If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email:

customerservice@sunnydazedecor.com, or via our contact us page at https://tiny.cc/SunnydazeContact

SHADED COMFORT BASKET CHAIR

Read all assembly and care instructions carefully before using this product. Save this manual for future reference.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

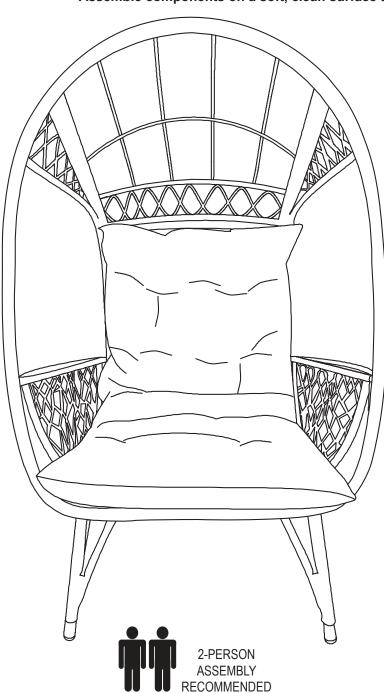

Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

| No. | PARTS | |
|-----|--------------------|---|
| Α | Front Right Leg | 1 |
| В | Front Left Leg | 1 |
| С | Back Right Leg | 1 |
| D | Back Left Leg | 1 |
| E | Seat | 1 |
| F | Backrest | 1 |
| G | Top Front Frame | 1 |
| н | Bottom Front Frame | 1 |
| ı | Right Armrest | 1 |
| J | Left Armrest | 1 |
| K | Basket Top | 1 |
| L | Cushion | 1 |

| No. | HARDWARE | | QTY. |
|-----|----------|--------------|------|
| 1 | | Bolt Cap | 30 |
| 2 | Θ | Nut Cap | 2 |
| 3 | | M6x20mm Bolt | 19 |
| 4 | | M6x35mm Bolt | 9 |
| 5 | | M6x40mm Bolt | 2 |
| 6 | | Nut | 2 |
| 7 | 0 | Washer | 32 |
| 8 | | Spanner | 1 |
| 9 | | Hex Key | 1 |




CHOKING HAZARD — This item contains small parts that can be swallowed. Keep children and pets away during assembly.

ASSEMBLY

Review all steps and understand assembly before beginning.

Do not fully tighten hardware until all components have been loosely assembled.

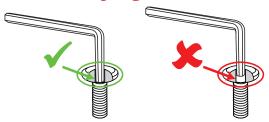


TIP: Always fully insert the hex key inside the designated notch of the bolt.

If the hex key is not fully inside the notch, the hex key could slip out, causing damage to the bolt head. Repeated hex key slipping will cause the notch to become rounded, making it difficult or impossible to tighten the bolt with the hex key.

ATTENTION! Do not fully tighten any hardware until all components are loosely assembled. If each bolt is fully tightened too soon, mounting holes may not align and parts may not easily fit together.


Turn each bolt, by hand, until the bolt grips into the mounting hole. Continue this process until all bolts have been loosely installed. Only tighten the hardware entirely after the product is completely set up; do not over-tighten bolts. Do not use any electronic tools to assemble this product. The high energy of electronic tools can cause hardware to over-tighten, and can strip the bolt, the bolt head, and the mounting holes.

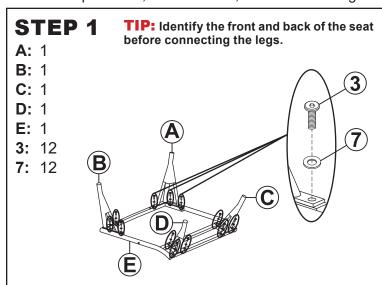

Place Seat (E) on a soft, clean surface.

Secure Front Right Leg (A) to Seat (E) using three Washers (7) and three M6x20mm Bolts (3).


Repeat this process to connect Front Left Leg (B), Back Right Leg (C), and Back Left Leg (D) to the Seat (E), as shown.

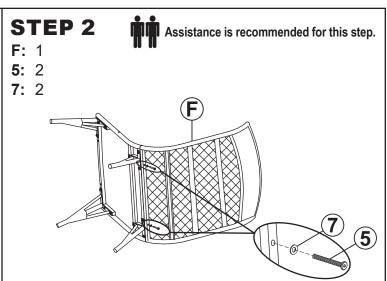

Turn the seat on its side.

Loosely attach Backrest (F) to the back of the seat using two Washers (7) and two M6x40mm Bolts (5).


Do not fully tighten the bolts.

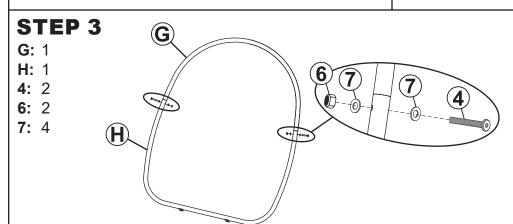

TIP: Install the bolt head on the outside of the frame, as shown.

Attach Top Front Frame (G) to Bottom Front Frame (H) using four Washers (7), two M6x35mm Bolts (4), and two Nuts (6), as shown.

Do not fully tighten the bolts.

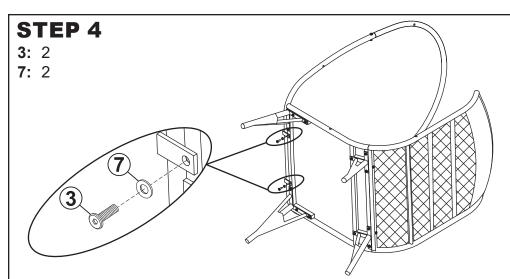




Assistance is recommended for this step.

Loosely attached the bottom of the assembled front frame to the front of the seat using two Washers (7) and two M6x20mm Bolts (3) as shown.

Do not fully tighten the bolts.

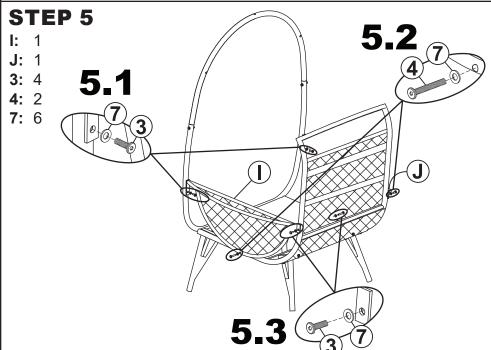



Assistance is recommended for this step.


TIP: Ensure the armrests are installed with the flat edge facing inward.

Stand the basket chair upright.

- **5.1** Loosely attach the front of Right Armrest (I) to the front frame using one Washer (7) and one M6x20mm Bolt (3).
- **5.2** Loosely attach the bottom of the armrest to the seat using one Washer (7) and one M6x35mm Bolt (4).
- **5.3** Attach the back of the armrest to the backrest using one Washer (7) and one M6x20mm Bolt (3).

Repeat this process to connect Left Armrest (J).

Do not fully tighten the bolts.

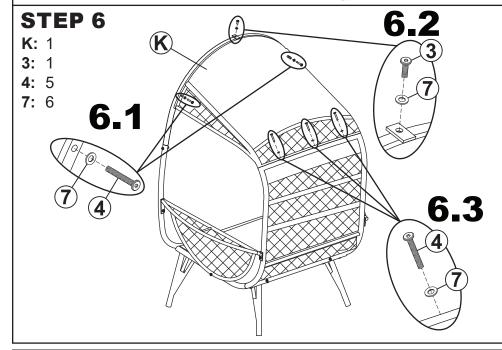




Assistance is recommended for this step.

TIP: Ensure the basket top is installed beneath the mounting tab on the front basket frame.

- **6.1** Loosely attached Basket Top (K) to the sides of the front frame using two Washers (7) and two M6x35mm Bolts (4), as shown.
- **6.2** Loosely secure the center of the basket top to the front frame using one Washer (7) and one M6x20mm Bolt (3), as shown.
- **6.3** Fasten the back of the basket top to the top of the backrest using three Washers (7) and three M6x35mm Bolts (4), as shown.

Do not fully tighten the bolts.

Page 3 / 4

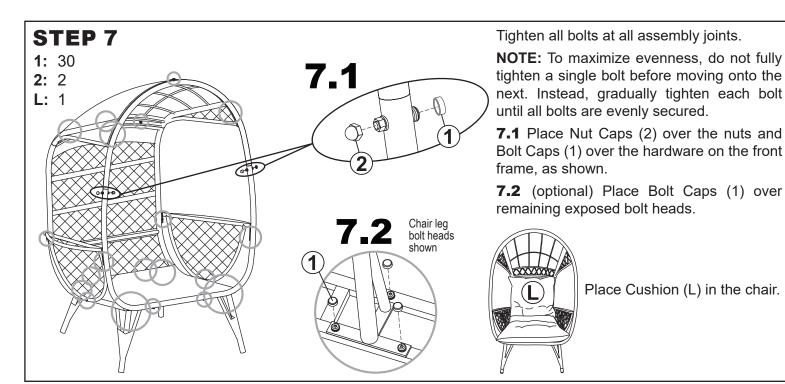

Care & Maintenance

SAFE USE: Follow all safety statements and warnings. For residential use only. Only use on a flat, level surface. Do not stand on the chair. Do not exceed the weight capacity of the chair.

INSPECT: Before use, ensure the unit is assembled correctly and all hardware is securely tightened. Do not use this product if parts are missing, broken, damaged, or worn out.

PROTECT: Always remove the cushion when the chair is not in use. When not in use, cover the chair with a breathable cover to help protect it from the effects of sunlight, inclement weather, dirt, dust, and collecting debris.

SUN EXPOSURE: All fabrics will eventually fade from sun exposure. Maintain cushion color and integrity by storing the cushions indoors when not in use.

CLEAN: Use a soft cloth and clean, warm water to spot-clean the cushion. Use a damp cloth to hand-wash the chair. Do not use chemicals or abrasive materials to clean any part of the unit.

WINTER CARE & STORAGE: Move the chair to a dry, indoor location. Covering the unit while in storage will help prevent dust build-up.

🛕 SAFETY STATEMENTS & WARNINGS 🛕

- · Do not exceed the weight capacity.
- This product is intended to be used by one person at a time.
- Do not use this product during inclement weather such as, but not limited to, strong wind, thunderstorms, rain, hail or snow.
- Do not allow children to use this product without adult supervision.
- · Never stand on the chair.
- Install all parts in accordance with the assembly instructions and inspect the chair for stability before use.
- Inspect hardware often and tighten loose hardware before use.
- · Keep furniture a safe distance from heat sources such as, but not limited to, fire pits, patio heaters, and grills.
- · Do not put hot items on or near furniture.
- · Do not use harsh chemicals or abrasive materials to clean the furniture.

Any modification to the product or failure to follow recommended care will void the product warranty.

≜WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.