MANUFACTURERS OF WALL DECOR, LIGHTING,



DECORATIVE ACCESSORIES AND ACCENT FURNITURE

## UTTERMOST

## ASSEMBLY AND INSTALLATION INSTRUCTIONS STYLE# 21332

## Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.

2.Be sure the power to the installation point is power off. This lamp must be installed on reinforced outlet box.

3. Adjust the length of wire needed for your installation, remove excess. Determine the number of Rods to be assembled

according to your hanging height. Pass supply wires through the **Rods**. Thread the **Rods** to connect the **Loop#2** and **Nipple** of the **Fixture Body**. Hand tighten until sung.

4. Attach one end of the Quick Link#1 and Loop#1 on the bottom of Canopy, and then attach the other end of the Quick Link#2 onto the Rods.

**5**. Pass the supply wires through the **Canopy** and **Crossbar**. And fasten the **Crossbar** to the **Canopy**. Thread **Finial** to secure it. Hand tighten until snug.

6.Connect the wires as shown : A.Connect the House Gound Wire to the Fixture Ground Wire.

B.Connect the House White or Ribbed Wire to the Fixture Supply Wire (White or Ribbed Side).


C.Connect the House Black/Red Wire to the Fixture Supply Wire (Black or Smooth Side).

D.Wrap each connected wire with Wire Nut and carefully stuff all of the connected wires into the Outlet Box.

7.Install the Bulb referring to fixture markings and/or labels for maximun wattage on the Socket(No Included)

8. Place the Glass Shade carefully onto the Metal Cup.

## Your installation is completed now. Restore electricity. Retain this sheet for future reference !

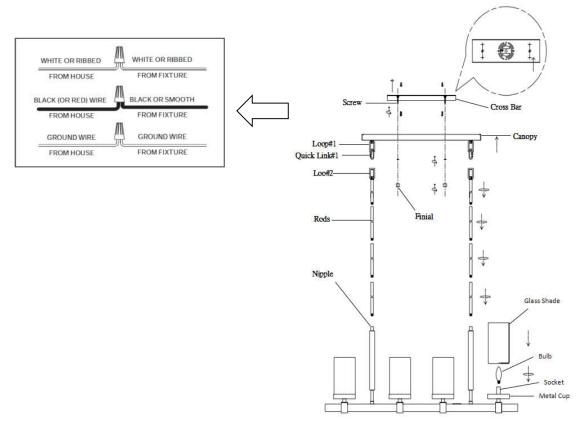

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com