

Installation instructions Washbasin

۲

۲



Important information	4
Installation	10

MAL_51193/21.03.3 **3**

۲



Ē

About these instructions

These mounting instructions come as part of the Duravit washbasin and are to be read carefully prior to the installation.

Target readership and qualifications

This is a professional grade product. A working knowledge of construction techniques and code compliant plumbing installation are required for proper installation and user satisfaction. The product must be installed by a licensed plumber.

Explanation of the signal words and symbols

NOTE!

To avoid property damage



00:10:00

۲

Link to the mounting instructions in this section

Inspection (e.g. for scratches)

Check for leaks and leak-tightness

Indication of the length of time (e.g. 10 minutes)

Safety instructions

Product and/or property damage

The breach of local and country-specific regulations and

standards can cause damage to the product and/or property

damage.

> Observe the local installation regulations and any country-specific standards at all times.

Prior to installation

Please read the specifications sheets prior to installation. Specification sheets are available for download at www.pro.duravit.us.



Products are in compliance with the following codes:

- Uniform Plumbing Code (UPC®)
- National Plumbing Code of Canada
- Following standards: ASME A112.19.2/CSA B45.1


4 MAL_51193/21.03.3

$\mathbf{\hat{v}}$



۲

Delivery contents

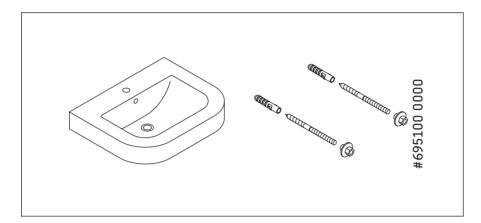


۲


The washbasin will include mounting hardware model # 695100 0000. The plastic anchors provided are for concrete wall applications. For wood stud walls, the lag bolts should be screwed into the wood backing.

Ì

M

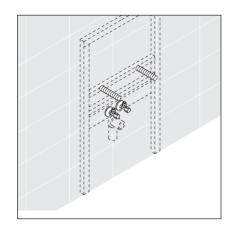


When mounting the washbasin on a pre-wall carrier, install the mounting bolts to the element.

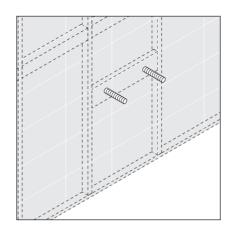


۲

When mounting the washbasin into a wood stud wall, there must be adequate bracing. We recommend doubling up 2x6's or 2x8's between the studs to form a solid anchoring point. Reference the washbasin specification sheet to establish the height and the spacing of the mounting bolts.

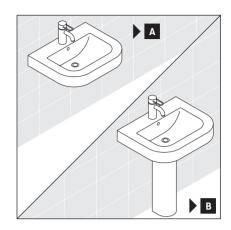


Washbasins with siphon cover > Continue with mounting A


Washbasin with pedestal > Continue with mounting B

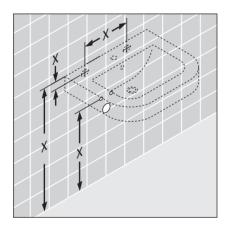

The washbasin specification sheet will provide the recommended mounting height and show the location of the mounting holes. (The height can be adjusted to your personal preference)

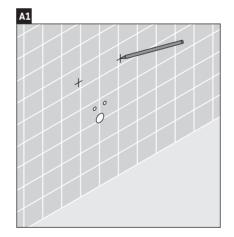

> Mark the location of the mounting holes.

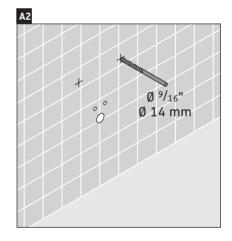


> Using the appropriate bit for the wall material, drill pilot holes.

6 MAL_51193/21.03.3

۲


DURAVIT

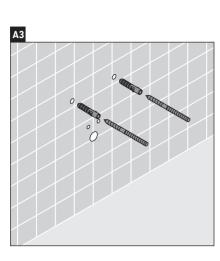


Please note if the washbasin will be mounted on a concrete wall application, anchors must be used.

- > Screw mounting bolts into the pre-drilled holes with an adjustable wrench.
- Screw in the full length of the mounting bolt, so the lag thread is > no longer visible.


۲

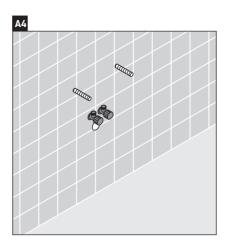


Install Shut off valves according > to manufacturer's installation instructions.

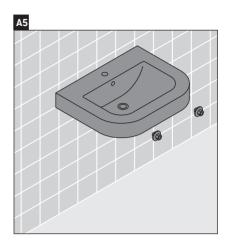


- Carefully slide washbasin onto the > mounting bolts.
- Insert white plastic sleeve over > the bolt and into the hole of the washbasin.
- Install provided washer and nut. Hand tighten the nut so the >
- > washbasin is secure.

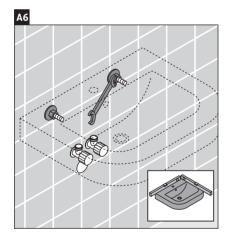


> Leveling the washbasin: the white plastic sleeves protect the china from the metal bolt and allow for slight adjustment in the height of the washbasin to level it.

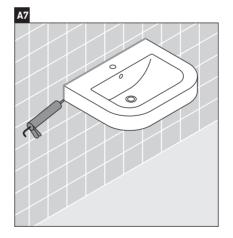

> Apply silicone around washbasin edges.

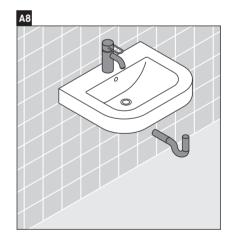

 Install faucet and trap assembly according to manufacturer's installation instructions.

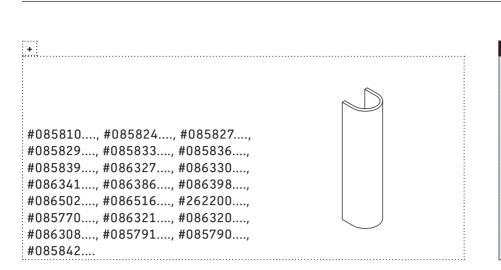

B1 0


Set washbasin on pedestal leg > carefully, then using a level, properly align the washbasin.

Pedestal


Note!

۲

- Pedestal may only be installed with corresponding listed washbasin.
- > Scan QR Code on packaging label or visit the webadress qr.duravit.com/"articlenumber" to get listed washbasin.

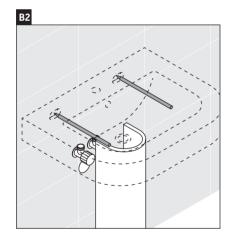


- Mark the location of the mounting > holes.
- Mark the location of the back edge > where the washbasin meets the wall.

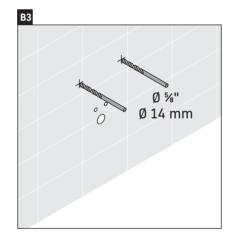

۲

> Using the appropriate bit for the wall material, drill pilot holes.

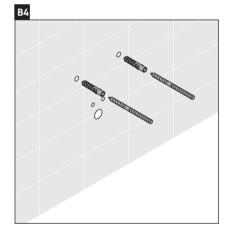

Please note if the washbasin will be mounted on a concrete wall application, anchors must be used.


- > Screw mounting bolts into the pre-drilled holes with an adjustable wrench.
- Screw in the full length of the mounting bolt, so the lag thread is no longer visible.

8 MAL_51193/21.03.3


DURAVIT




۲

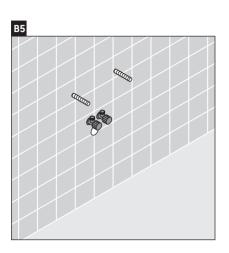


Install Shut off valves according > to manufacturer's installation instructions.

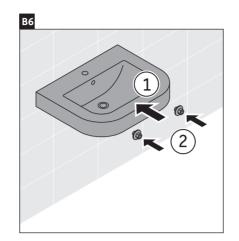


- > Carefully slide washbasin onto the mounting bolts.
- Insert white plastic sleeve over the bolt and into the hole of the > washbasin.
- Install provided washer and nut. Hand tighten the nut so the >
- > washbasin is secure.

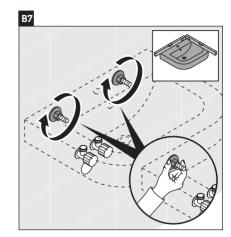


> Leveling the washbasin: the white plastic sleeves protect the china from the metal bolt and allow for slight adjustment in the height of the washbasin to level it.

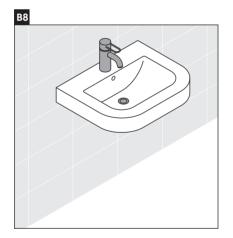

 Install the faucet according to the corresponding installation instructions.

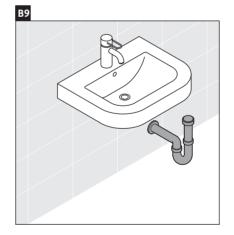


 Install the siphon according to the corresponding installation instructions.

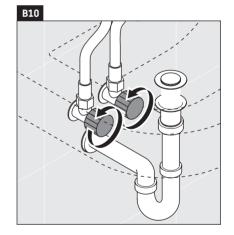


Turn on Shut off valves to test water flow to faucet and drain. >

Ŵ

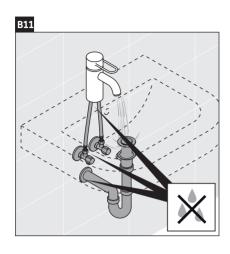


> Test faucet and drain to ensure there are no leaks.

۲

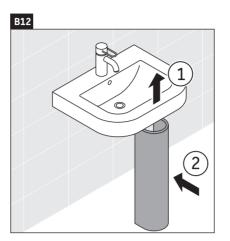


۲

 Gently lift the front of the washbasin to allow pedestal to slide underneath. Slightly loosen mounting if needed to allow for safe lift of basin lip.

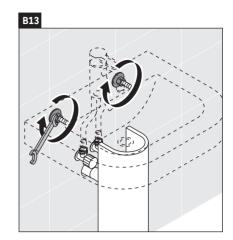

- > Tighten mounting bolts with wrench to secure. Inspect and adjust for proper level. Washbasin should sit snug upon
- > pedestal base.

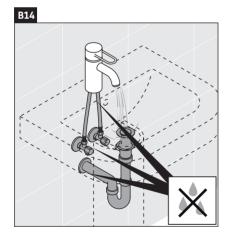


> Test faucet and drain to ensure there are no leaks.



> Apply silicone around washbasin edges.







DURAVIT USA, INC. 2635 North Berkeley Lake Rd., Ste. 100 Duluth, GA 30096 Toll Free 888-DURAVIT Phone 770-931-3575 Fax 770-931-8454 info@us.duravit.com www.duravit.us

DURAVIT

۲

۲