




# ASSEMBLY INSTRUCTIONS

STYLE#: 28641-1

**Careful unpack all lamp parts from the carton.**

1. Unpack all parts from carton carefully.
2. Place the Metal tube onto the Base.  
Tighten the Metal tube and Base together with Big Hex Nut by Wrench enclosed.
3. Place the Arm assembly into the top end of the Metal tube. Tighten by using Round metal turning enclosed.
4. Place the Shade over Socket as shown.  
Thread Socket Collars onto Sockets to secure Shades. Hand tighten until snug.
5. Put the 3 x 100W Bulb (not included) onto the lamp before connecting the plug to the electricity outlet Box.

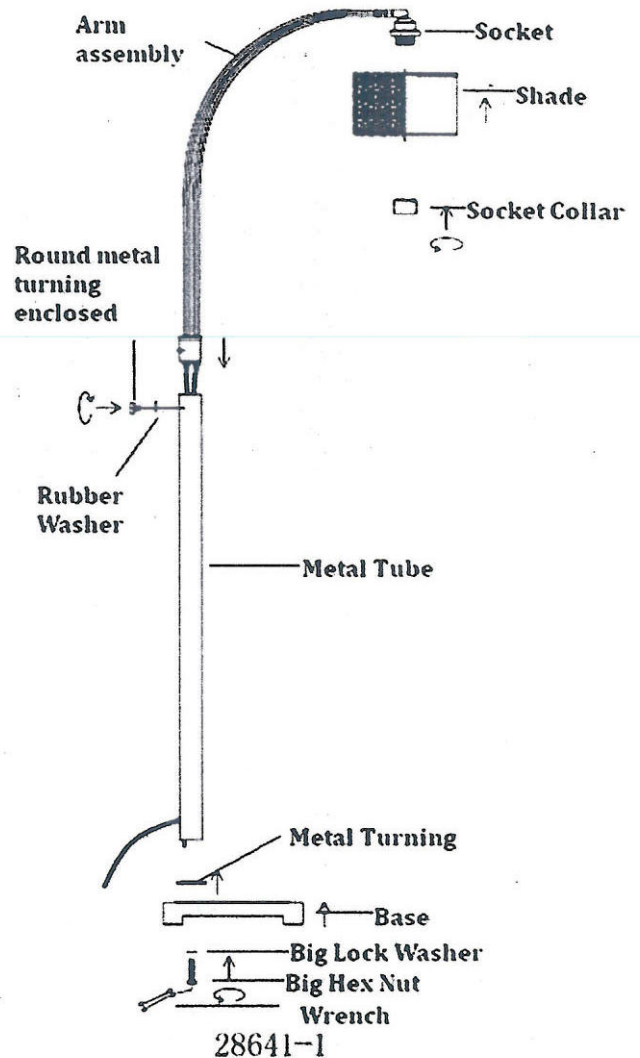

## IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.