



UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 29738-1

Careful unpack all lamp parts from the carton.


1. Position the round plate on the top of the **Shade** through the **Socket**.

Thread the **Metal Sleeve#1** and **Metal Sleeve#2** onto the **Socket**.

Then use **Plastic Wrench** to lock the **Socket Collar** to secure the **Shade**.

Hand tighten until snug.

2. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage. (Not Included)

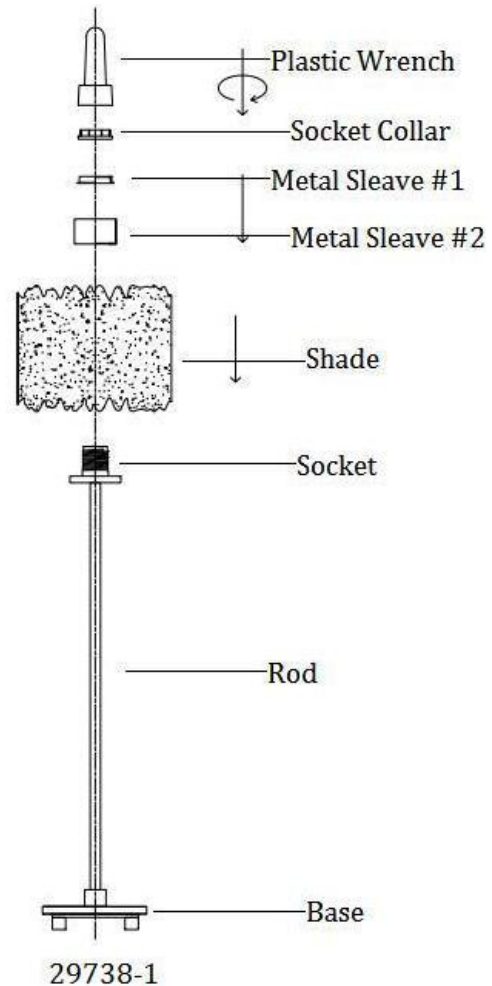

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.