


## INSTALLATION INSTRUCTIONS

### WALL MOUNT VANITIES


*It is strongly recommended that Native Trails wall mount vanities are installed by a licensed contractor.*

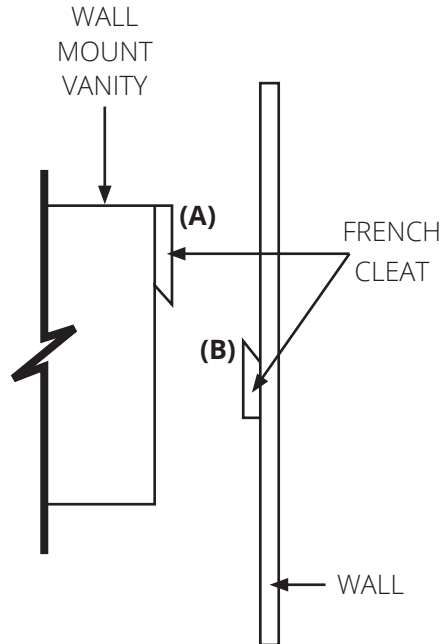

### BORDEAUX WALL MOUNT, CHARDONNAY AND CABERNET FLOATING VANITY

1. Determine desired height and location of studs in wall.
2. Attach French Cleat **(B)** to wall using 3.5" screws, making sure slanted edge will fit evenly with French Cleat **(A)**. Make sure it is level and at proper height to support vanity.
3. Hang vanity on French Cleat **(B)** attached to wall.
4. From underneath vanity, install 3.5" wood screws through vanity and into French Cleat **(B)** to secure vanity.
5. Install top, sink, and drain according to installation instructions.

**Figure 1.** (front view)

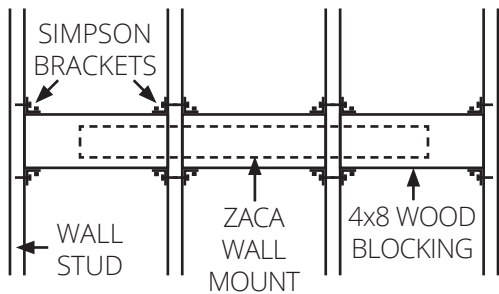

### ZACA WALL MOUNT

1. Determine desired height and location.
2. Remove drywall and install blocking support according to **Figure 1**. Install 4x8 wood blocking between each stud to the full length of Zaca Wall Mount; 3 blocks for 36" Zaca Wall Mount, 4 blocks for 48". Attach blocking to studs with Simpson A34 brackets (not supplied) on top and bottom of each block as shown in **Figure 1**. Front face of blocking should be flush with front face of stud.
3. Replace drywall, marking location of installed blocking. Patch drywall as needed.
4. Using Zaca Wall Mount as a template, mark mounting holes.
5. Using a 1/4" drill bit, pre-drill mounting holes into installed wall blocking for 3/8" lag bolts (not supplied).
6. Attach Zaca Wall Mount to wall according to **Figure 2**.
7. Install NativeStone® Trough sink and drain according to installation instructions.

**Figure 2.** (top view)

