


# Assembly & Installation Instructions

Dew Pendant 136540

A509

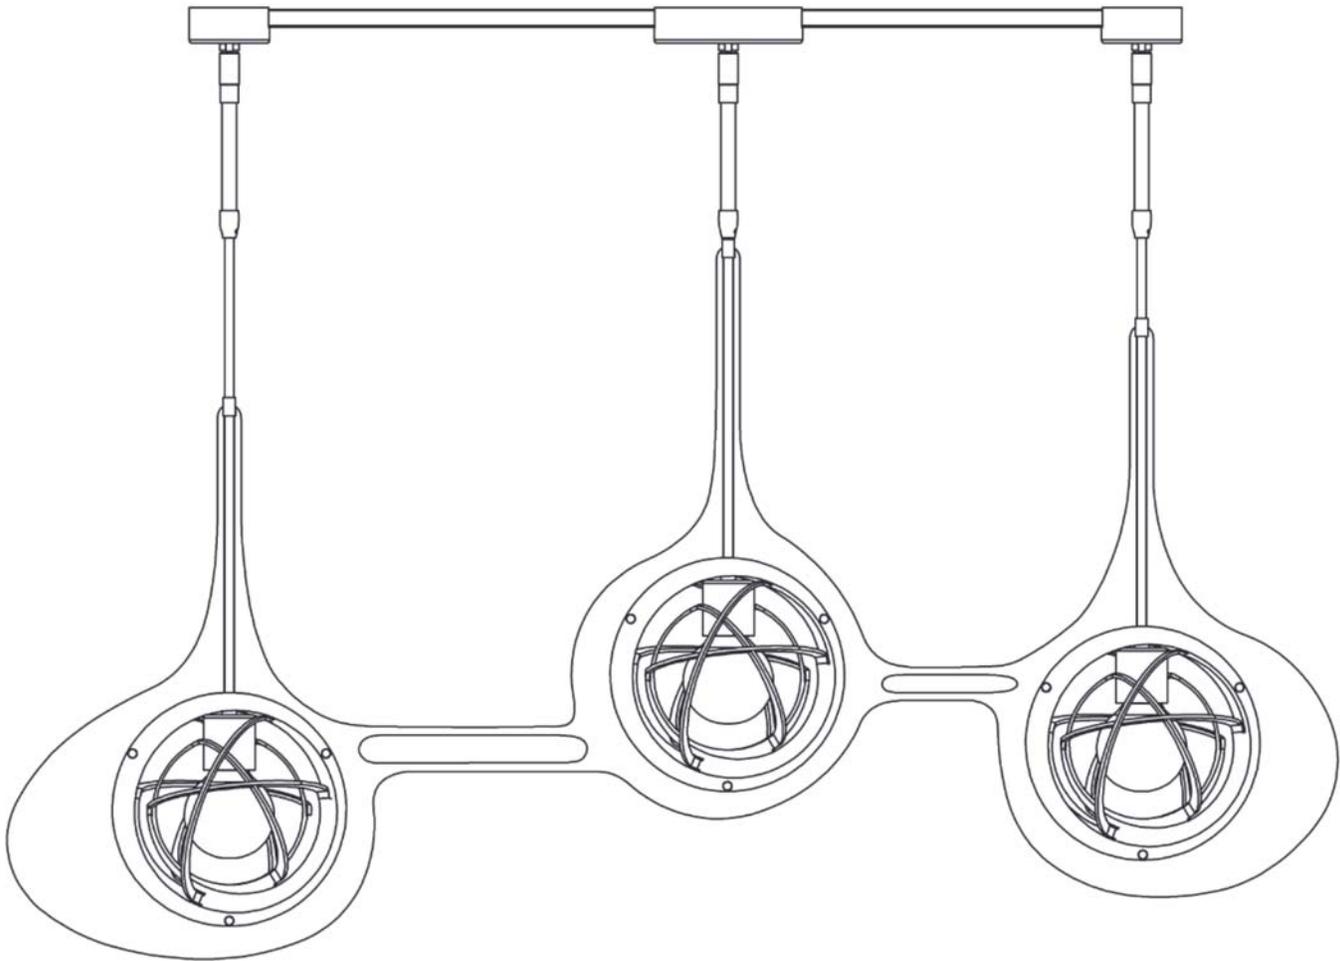

## Component Parts

<b>A</b>	<b>Fixture</b>
<b>B</b>	<b>Short Fixture Pipe</b>
<b>C</b>	<b>Medium Fixture Pipe</b>
<b>D</b>	<b>Long Fixture Pipe</b>
<b>E</b>	<b>Coupling</b>
<b>F</b>	<b>Canopy Pipe (3)</b>
<b>G</b>	<b>Middle Canopy Can</b>
<b>H</b>	<b>Side Canopy Can (2)</b>
<b>I</b>	<b>Clutch (3)</b>
<b>J</b>	<b>Plastic Sleeve (3)</b>
<b>K</b>	<b>Set Screw (3)</b>
<b>L</b>	<b>Middle Crossbar</b>
<b>M</b>	<b>Outer Mounting Plates (2)</b>
<b>N</b>	<b># 8 Screw</b>
<b>O</b>	<b>Safety Cable</b>
<b>P</b>	<b>Ground Screw</b>
<b>Q</b>	<b>Cupped Washer</b>
<b>R</b>	<b>Long Threaded Studs (2)</b>
<b>S</b>	<b>Short Threaded Studs (4)</b>
<b>T</b>	<b>Barrel Knobs (6)</b>
<b>U</b>	<b>Wood Screws (4)</b>

# Assembly & Installation Instructions

A509

## Dew Pendant 136540

**CAUTION:** FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible due to our kits are used on multiple products and options.

### To Assemble Fixture (Figures 1, 2 & 3)

**CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.**

1. Carefully unpack fixture from carton.
2. Refer to Figure 1. Notice that the fixture is not symmetrical, Side A is further away from the Center of the fixture (A) than Side B. Also notice that the height of the coupling (E) varies between the center and Sides A & B. The coupling (E) on Side B is higher than the coupling (E) on Side A. Please refer to this designated Side A and Side B of fixture while completing the installation.
3. Locate 3 different lengths of fixture pipes (B, C, D). Slip short fixture pipe (B) over center set of wires, making sure the end with unpainted threads goes on first.
4. Apply a drop of the supplied thread locking compound to the threads of fixture pipe (B) and screw into coupling (E), being careful not to twist or pinch the wires.

Note: Application of the thread locking compound is necessary to prevent the pipe from loosening during regular maintenance and cleaning of the fixture. Be certain to apply the compound.
5. Repeat for Medium (C) and Long (D) Fixture Pipes. The Medium Fixture Pipe (C) should be used on the B side of the fixture and the Long Fixture Pipe (D) should be used on the A side of the fixture. (Figure 1)
6. Run the wires from the center fixture pipe (B) through the canopy pipe (F) attached to the middle canopy can (G).
7. Unscrew the clutch (I) from the center canopy pipe (F); slide it across the wires and onto the fixture pipe (B). Follow this with the plastic sleeve (J), oriented so the tapered end nests in the clutch (I). (Figure 2)
8. Repeat steps 6 & 7 for the side canopy cans (H) and the Side A and Side B wires.
9. Slide the canopy pipe (F) as far as necessary to give you the total height of the fixture which you desire. Be careful not to scratch the pipe surfaces and to pull excess wire up through the canopy pipe (F). There must be a minimum 1-1/2" of inner pipe inside the outer pipe. Screw clutch (I) onto canopy pipe (F). Tighten the set screw (K) firmly with hex wrench provided.
10. Repeat this for the other two fixture pipes (C,D)
11. Follow steps on following page to complete installation.

Yeah, you got this!



Castleton, Vermont USA | VERMONTMODERN.COM

39009

# Assembly & Installation Instructions

A509

Dew Pendant 136540

## To Complete Installation (Figures 1, 2 & 3)

1. Using two machine screws (not provided), attach the middle crossbar (L) to the electric box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

2. Making sure to keep the canopy in the orientation desired and using the provided wood screws (U) attach the two outside mounting plates (M) to the ceiling.

Note/Caution: At least one screw per outside mounting bracket (1 per side) must be screwed to a structural member in the ceiling. Wood screws are supplied with your fixture; however, different materials and/or construction methods may require different fasteners. If in doubt, contact a qualified electrician.

3. Thread the short threaded studs (S) into the outer mounting plates (M). Thread the long threaded studs (R) into the middle crossbar (L).

4. Before hanging the fixture (A) make sure that the notches in the swivels are all facing the same direction. (Figure 3)

5. Raise the fixture (A) to the ceiling and using one of the #8 screws (N) found in the kitbag attach the safety cable (O) to the middle crossbar (L) and suspend the fixture

6. Run the black, white, and green ground wires from each side canopy can (H) through the square tube toward the middle crossbar (L).

7. Loosen the set screw (K) in the clutch (I) of either Side A or Side B of the fixture and loosen the clutch (I).

8. Secure the side canopy can (H) to the mounting plates (M) with barrel knobs (T) secure the side canopy can (H) to the outer mounting plate (M).

9. Repeat this for the second side canopy can (H) on the opposite mounting plate making sure to keep the notches in the swivel facing the same direction as the other swivel.

See Figure 3 for Orientation.

10. Retighten the clutch (I) and set screws (K) for both Side A and Side B.

11. Using suitable wire connectors (not provided), connect the fixture wires from all three cans to supply wires (white to white supply, black to black supply). Connect a pigtail lead to the crossbar ground screw (P) and cupped washer (Q). Connect all ground wires (bare copper or green to bare copper or green). Push wires back into outlet box. Be sure to leave slack in the wires to allow for final height adjustments.

Caution: Make sure wire connectors are twisted on securely, and no bare wire is exposed.

12. Slide middle canopy can (G) against ceiling and secure with barrel knobs (T). Make sure no wires are pinched between the can and the ceiling.

13. Small adjustments in height may be made at this time by loosening the set screw (K) and clutch (L). Be sure to retighten after adjusting.

10. Install a bulb (not included) in each socket. It is not necessary to remove the decorative cage to install bulb.

11. Restore electricity at main breaker.



If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture! \* Vermont Modern / Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.


Castleton, Vermont USA | VERMONTMODERN.COM

39009


# Assembly & Installation Instructions

Dew Pendant 136540

A509

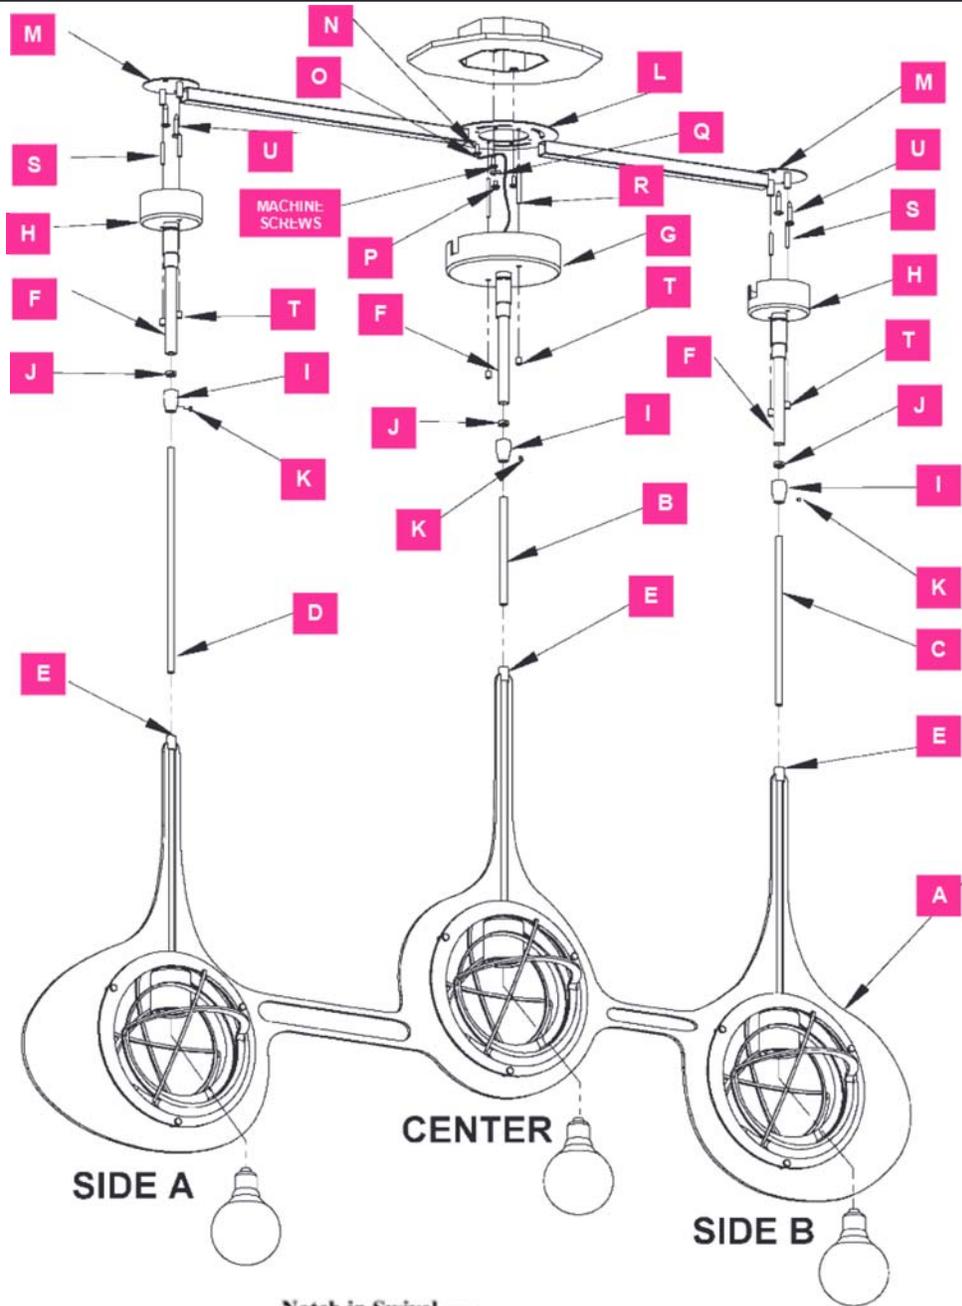


(Figure 1)

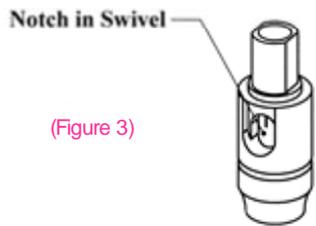

(Figure 3)

Swivel Detail

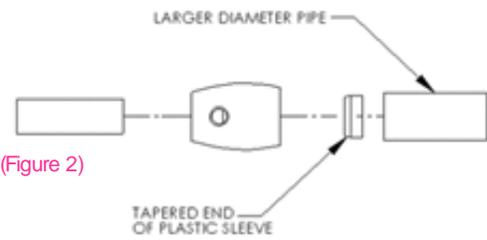

(Figure 2)

