# *Rockefeller*

## 35.24" Floating Open Hanging Closet

# Included in the package

| Part | Description | Qty | Box |
|------|-------------|-----|-----|
| 01 | Base | 01 | 01 |
| 02 | Top | 01 | 01 |
| 03 | Lateral | 02 | 01 |
| 04 | Rear Panel | 01 | 01 |
| 05 | Hanger Bar | 01 | 01 |

## Hardware

A = 08x

B = 12x

C = 04x

D = 02x

E = 02x

F = 02x

G = 01x

H = 02x

I = 02x
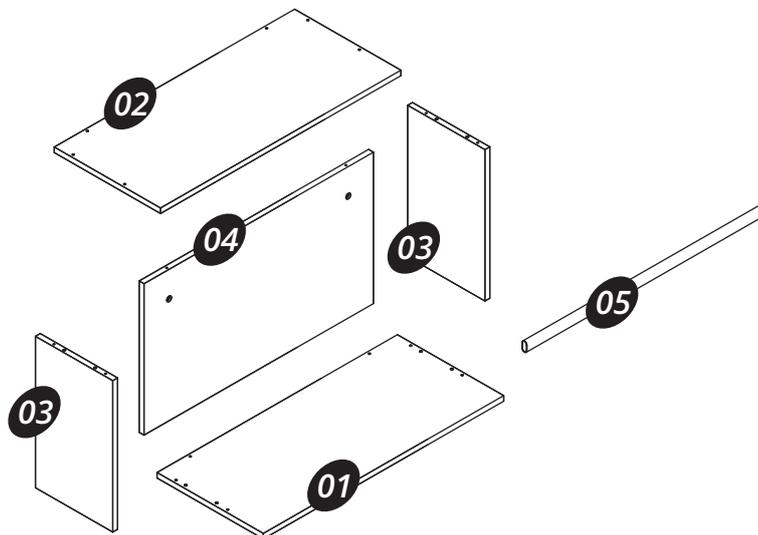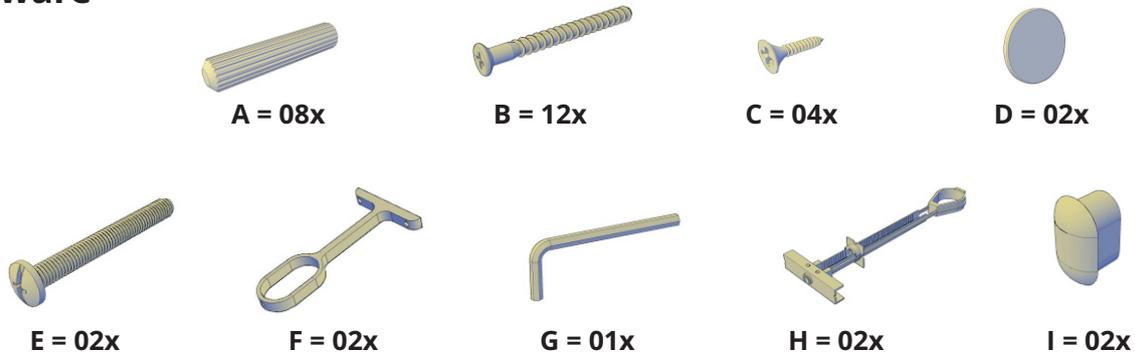
**Tools needed (not included)**
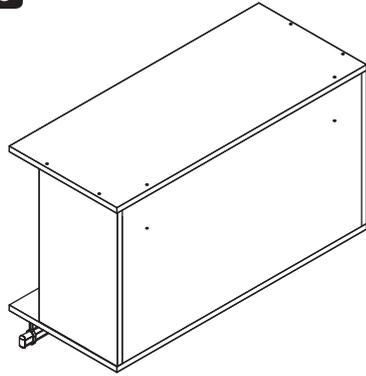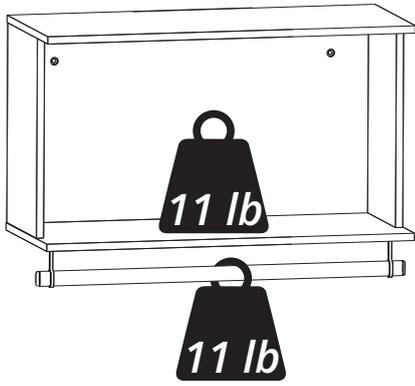
2x

11 lb

11 lb

35.24"

16.14"

17.32"

12.40"

33.94"

13"

**01**

A = 04x    B = 04x
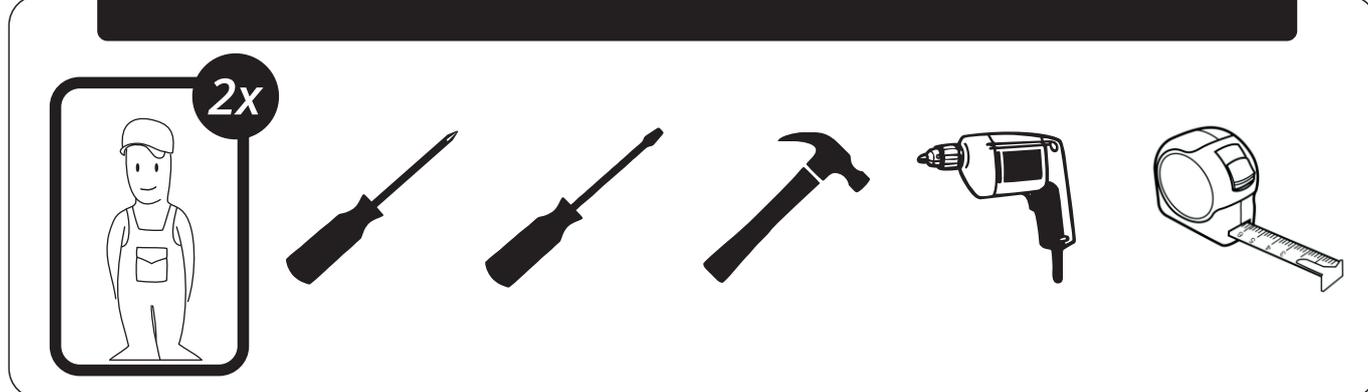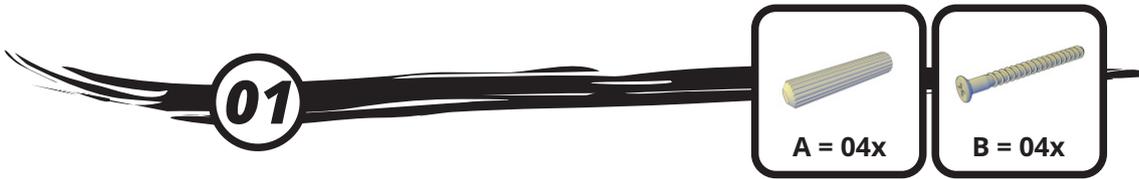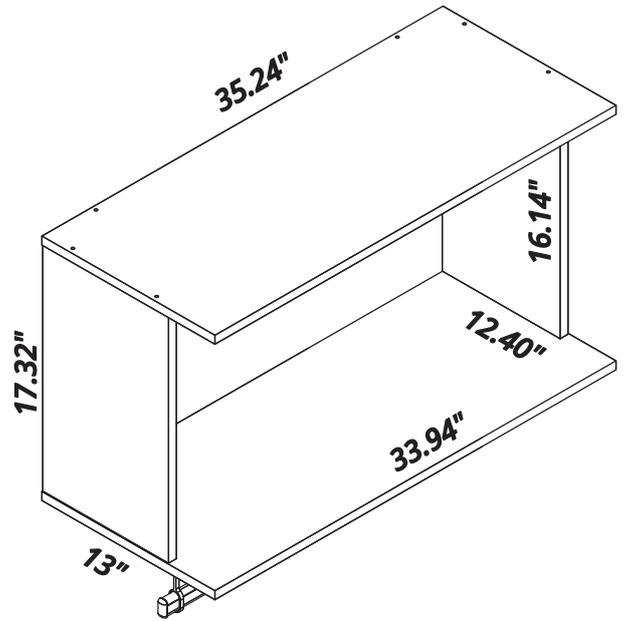
**Connect the part (01) onto the parts (03) with the hardware (A + B).**

03

03

A

A

01

B

B

B

B

**02**

B = 02x
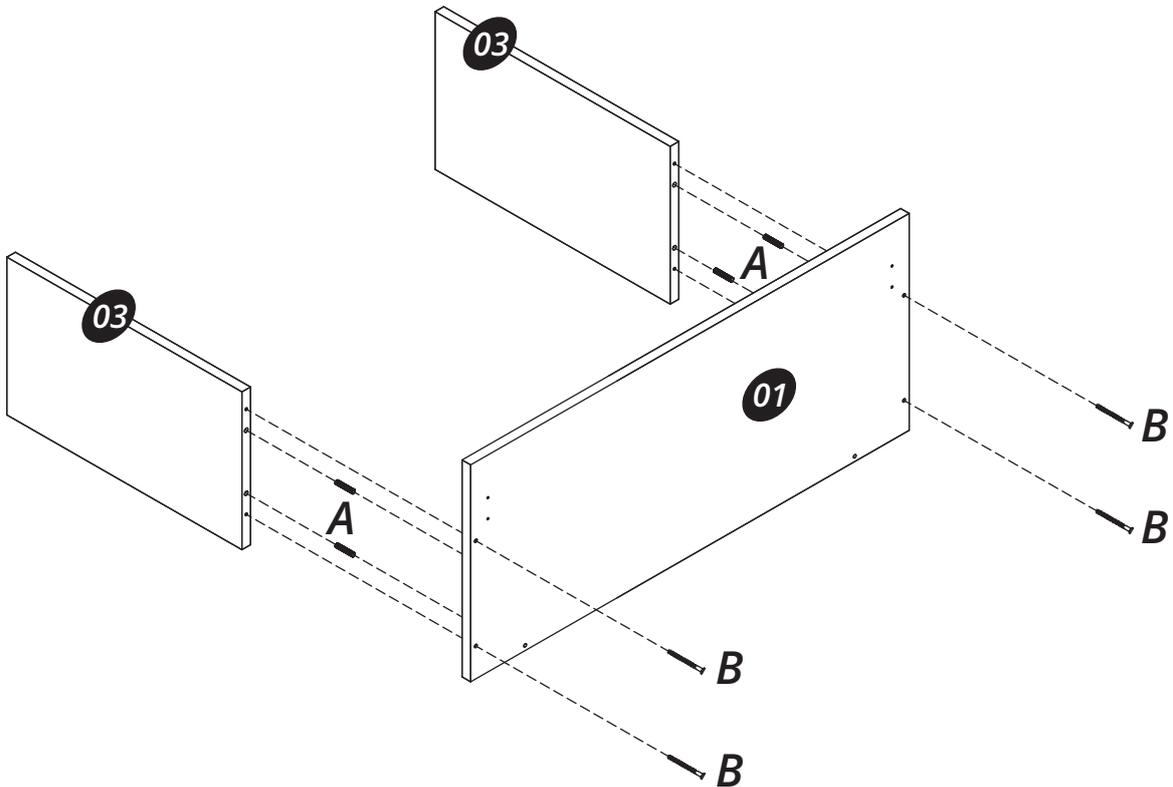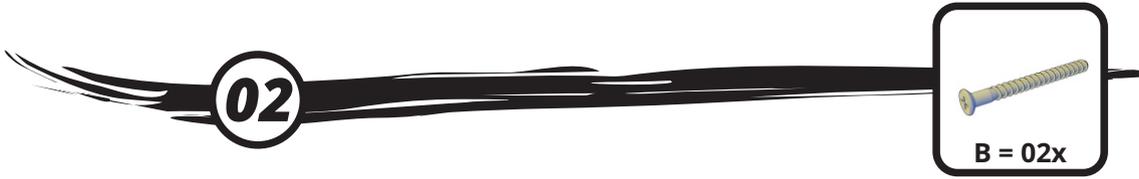
**Observe the correct position of the part (04) before connect onto the part (01) with the hardware (B).**
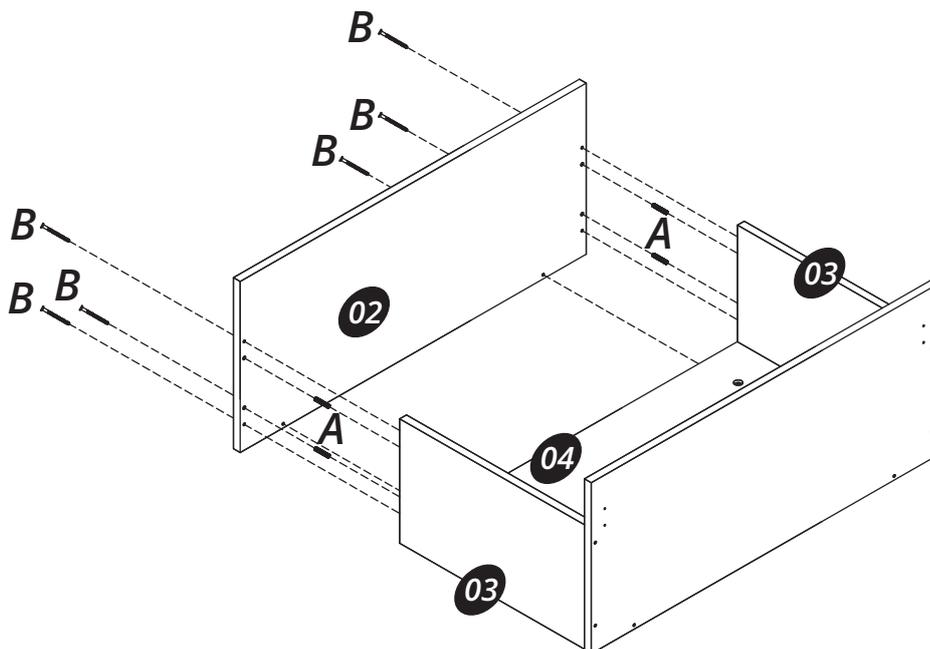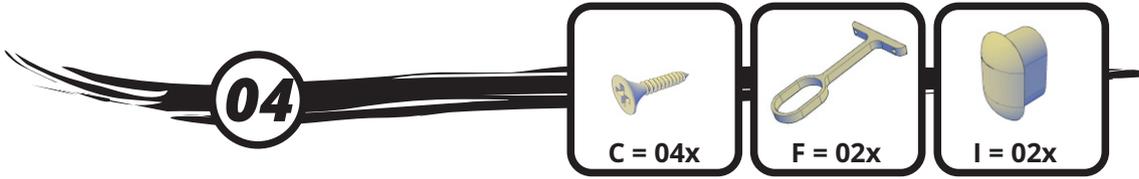
**04**

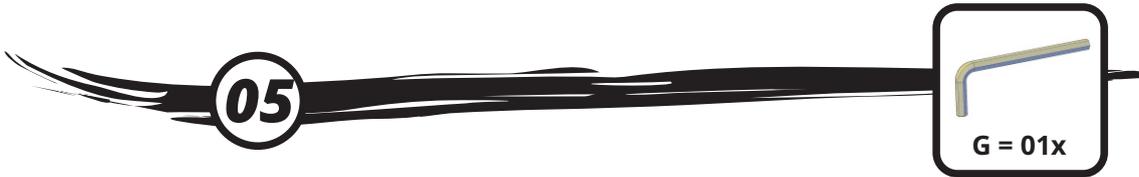**01**

B

B

**03**

A = 04x

B = 06x
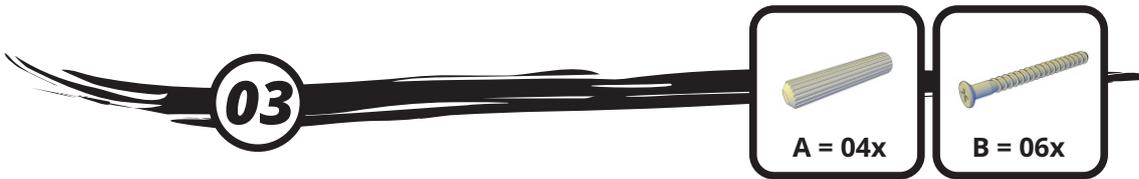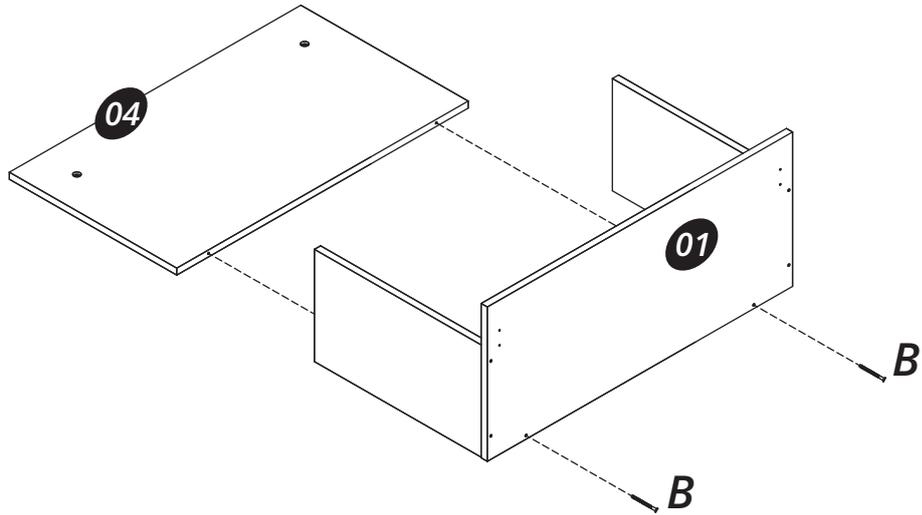
**Connect the part (02) onto the parts (03, 04) with the hardware (B) and the hardware (A).**
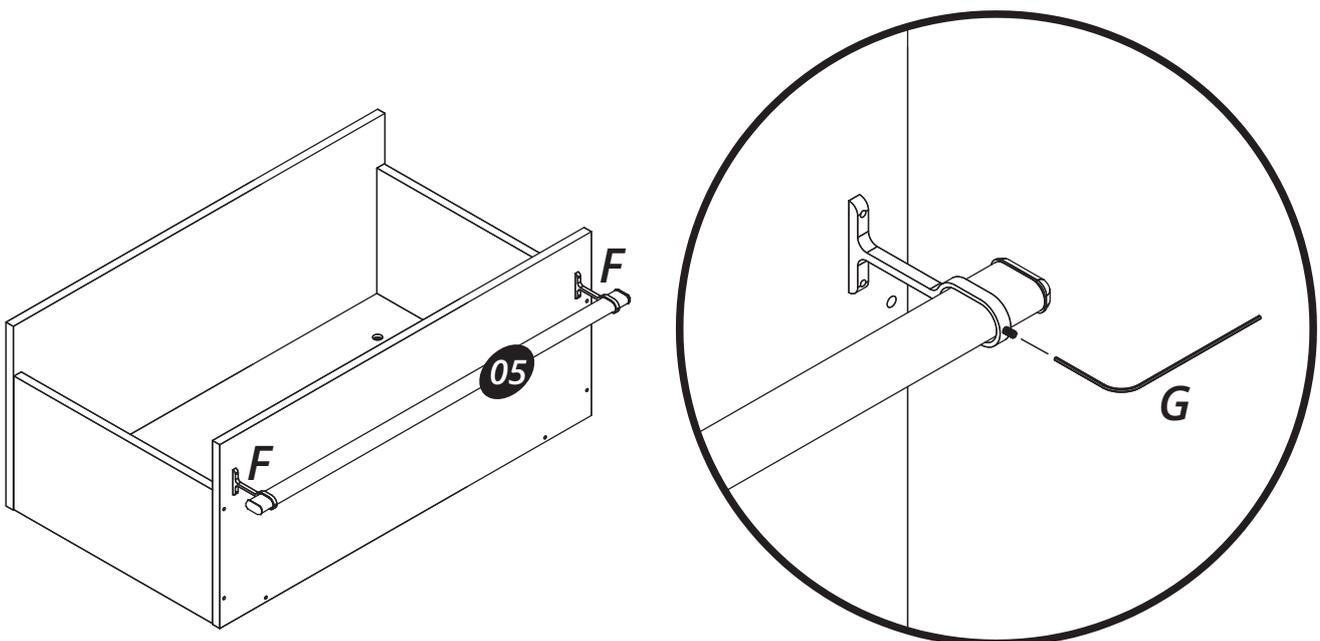
B

B

B

B

A

B

**03**

B

**02**

A

**04**

**03**

**04**

| | | |
|---|---|---|
| C = 04x | F = 02x | I = 02x |

**Connect the hardware (F) onto the part (01) using the hardware (C).**

**Connect the hardware (I) into the part (05).**

F
C
C
01
F
C
C

I
05
I

**05**

| |
|---|
| G = 01x |
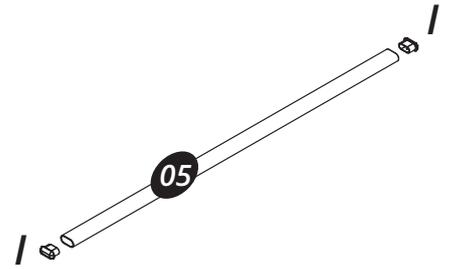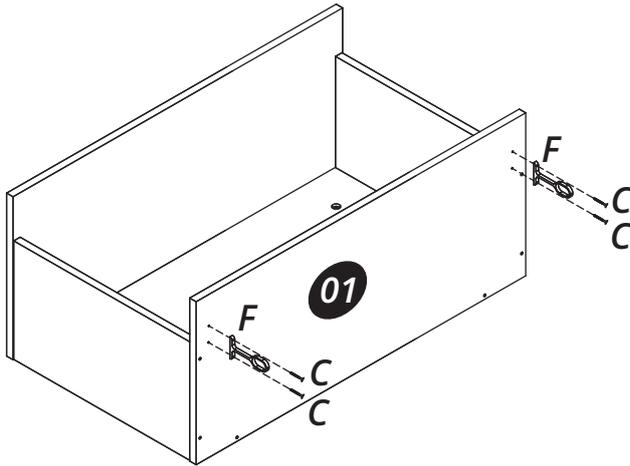
**Pass the part (05) through the hardware (F) and use the hardware (G) to tight the screw as shown on detail.**
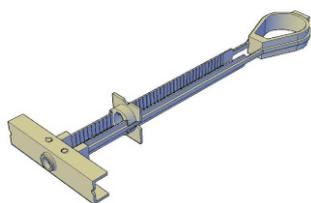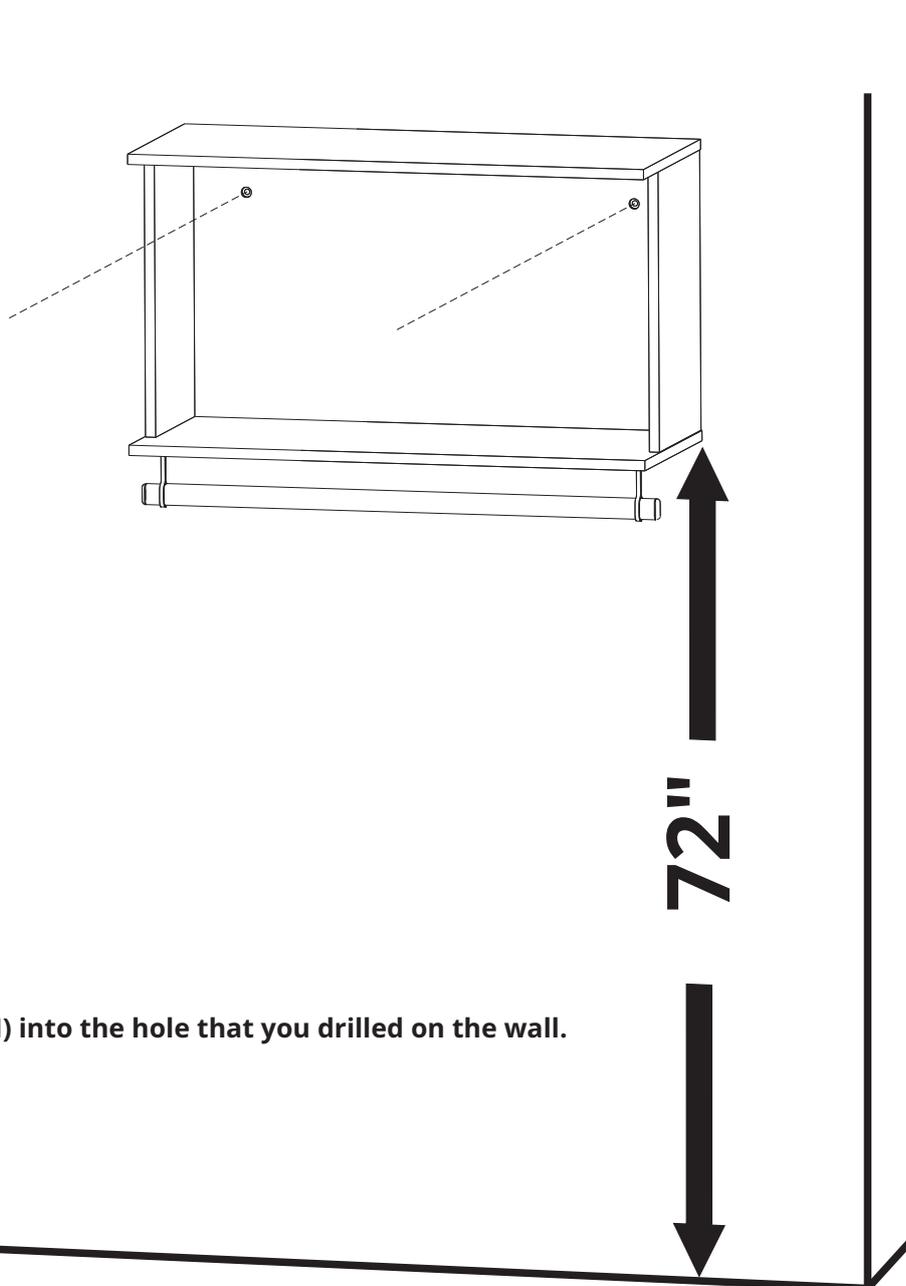
F
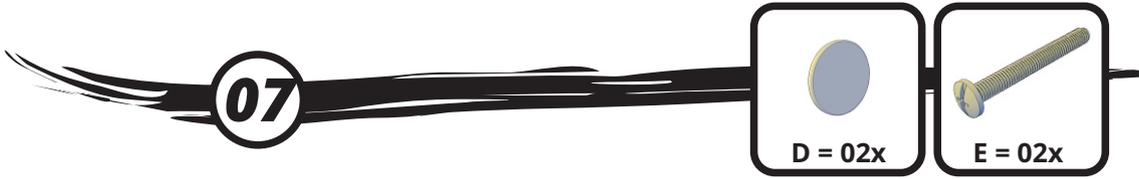05
F
G

**06**

**H = 02x**
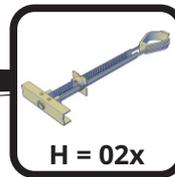
Observe the indicated height of the Floating Open Hanging Closet using the floor as reference (around of 72").

You will need a pencil to mark where you should drill the wall with a 1 /2" drill bit to put in the hardware (H).

**72"**

You will need apply the hardware (H) into the hole that you drilled on the wall.

**D = 02x**   **E = 02x**

**Connect the Floating Open Hanging Closet on the wall with the hardware (E + D)**

D E

D E