American Standard

INSTALLATION INSTRUCTIONS

TU105500 TU105501 TU105502 TU105507 TU105508

STUDIO® S PRESSURE BALANCE BATH AND SHOWER TRIM KIT

Thank you for selecting American Standard... the benchmark of fine quality for over 140 years.


To ensure that your installation proceeds smoothly-please read these instructions carefully before you begin.

For use with shower heads rated at 4.9 L/min (1.3 gpm) or higher.

RECOMMENDED TOOLS





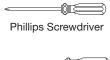






Channel Locks

Flat Blade Screwdriver

djustable wrench


ROUGHING-IN DIMENSIONS

To assure proper positioning in relation to wall.
 Note roughing-in dimensions.

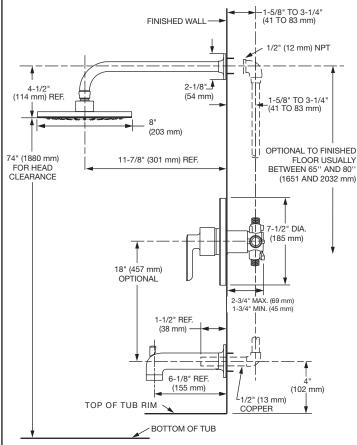


CARTRIDGE INSTALLATION

- Remove PLASTER GUARD (6)
 (Keep it installed for thin wall Installation).
- Remove BONNET NUT (1) by unthreading it Counter clockwise. Remove test CAP (2).
- Remove PROTECTIVE HOUSING (3) from CARTRIDGE (4). Install with "UP" text on top.
- Reinstall BONNET NUT (1) onto VALVE BODY (5) and hand tighten.

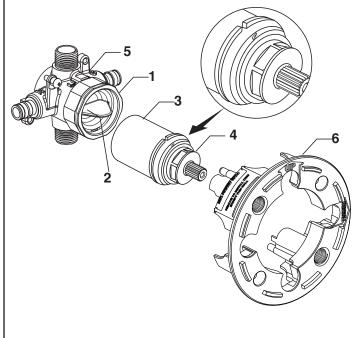

2 INSTALL VALVE TRIM (STANDARD WALL INSTALLATION)

- Figure 1. Push CAP (1) over VALVE CARTRIDGE (2) until seated against stop.
- Figure 2. Make sure O-RING (6) is secure within ESCUTCHEON HOLDER (3). Push ESCUTCHEON HOLDER (3) onto CAP (1) and attach with LONG SCREWS (4). Mount ESCUTCHEON SUPPORT (5) to ESCUTCHEON HOLDER (3) with 4 SHORT SCREWS (8).
- Figure 3. Install ESCUTCHEON (7) onto CAP (1) and push flush against finished wall. ESCUTCHEON (7) will snap fit onto ESCUTCHEON SUPPORT (5).

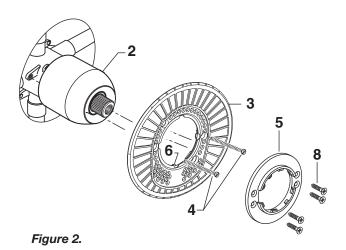


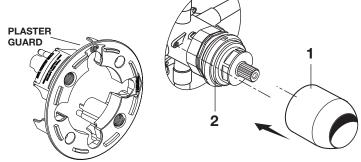


Figure 1.

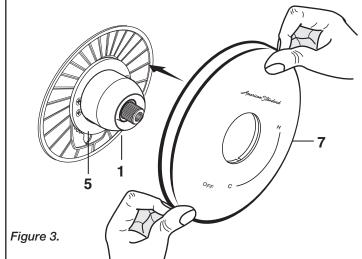



2a INSTALL VALVE TRIM (THIN WALL INSTALLATION)


Note: Plaster Guard will remain installed for thin wall installation.

- Figure 1. Remove SCREWS (7), push CAP (1) over VALVE CARTRIDGE (2) until seated against stop.

 Note: Escutcheon Holder must be installed with number facing out on bottom.
- Figure 2. Make sure O-RING (5) is secure within ESCUTCHEON HOLDER (3). Push ESCUTCHEON HOLDER (3) onto CAP (1) and attach with LONG SCREWS (4).
- Figure 3. Install ESCUTCHEON (6) onto CAP (1) and push flush against finished wall. Escutcheon (6) will snap fit onto ESCUTCHEON HOLDER (3).

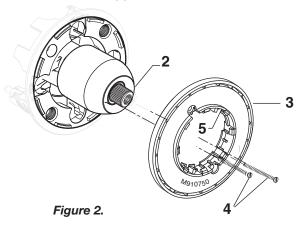

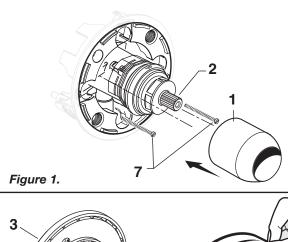

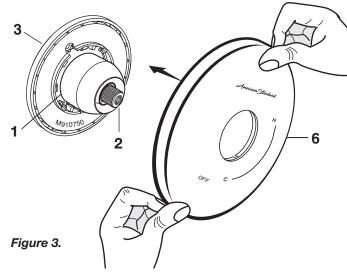


INSTALL, TUB SPOUT, SHOWER HEAD, SHOWER ARM WITH FLANGE

CAUTION Protect finish on SHOWER HEAD and TUB SPOUT when installing.


Note: Apply sealant or Teflon Tape to shower arm.

- Remove PIPE PLUG and CAP (1, 2) from shower pipe and tub filler pipe.
- Install SHOWER ESCUTCHEON (3) onto SHOWER ARM (4). Apply sealant or Teflon tape to threads on both ends of SHOWER ARM (4) and thread longer leg of SHOWER ARM (4) into shower elbow.
- Thread SHOWER HEAD (5) onto SHOWER ARM (4). Install TUB SPOUT (6). Tighten with HEX WRENCH supplied. Important: Do not over tighten Set Screw.

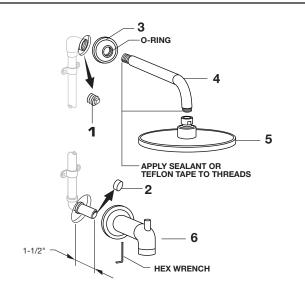


INSTALL HANDLE

- Hold ADAPTER (1) onto VALVE STEM (2) and install ADAPTER SCREW (3) through ADAPTER (1) into VALVE STEM (2). Tighten ADAPTER SCREW (3) to secure ADAPTER (1) to VALVE STEM (2).
- Install HANDLE BASE (4) onto ADAPTER (1). Insert SET SCREW (5) into HANDLE BASE (4). Align HANDLE BASE (4) and tighten with HEX WRENCH (6) supplied.

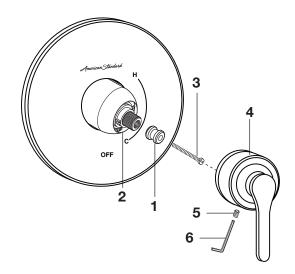

ADJUST HOT LIMIT STOP

- By restricting HANDLE rotation and limiting the amount of hot water allowed to mix with the cold, the HOT LIMIT SAFETY STOP (1) reduces risk of accidental scalding. To set the maximum hot water temperature of your faucet valve, adjust the setting on the HOT LIMIT SAFETY STOP (1).
- Turn CARTRIDGE STEM (2) to the OFF position (coldest setting) before making adjustment to HOT LIMIT STOP (1). Pull forward and rotate counterclockwise one number to limit hot water temperature. Use NUMBERS (5) on CARTRIDGE (4) on HOT LIMIT STOP (1) for indication.

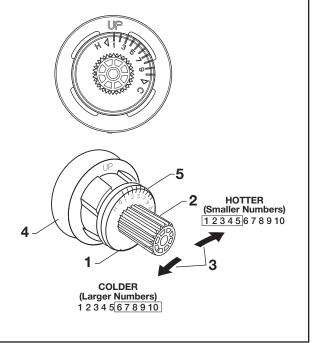

TO GAIN ACCESS TO VALVE FOR SERVICING

CAUTION Turn off hot and cold water supplies before beginning.

- Remove HANDLE (see step 3 and reverse).
- Remove ESCUTCHEON and CARTRIDGE CAP (see step 1 and reverse).

VALVE LEAKS WHEN SHUT OFF


- Remove CARTRIDGE, see STEP 1 and STEP 2 and REVERSE process.
- Clean SEALS on the side of CARTRIDGE. Clean inside sealing surface of VALVE BODY.
- Re-assemble CARTRIDGE. Install trim. Turn on water supply and check for leaks.

REPLACING CARTRIDGE (FIGURE 1)

- To remove CARTRIDGE (1), install split WASHER (3) (only supplied with replacement cartridge). as shown.
- Proceed to unthread BONNET NUT (2) counter clockwise.
 Note: CARTRIDGE (1) should be pulling out while unthreading BONNET NUT (2).
- Upon removal of the old Cartridge, install a new cartridge and secure it with BONNET NUT (Hand tighten).

BACK TO BACK INSTALLATION (FIGURE 2, 3 & 3A)

- Remove CARTRIDGE (1).
- Remove venturi tube by pushing it out. As shown in FIGURE 3.
- Rotate CARTRIDGE (1) 180° so that the Up text is displayed on the bottom side. As shown in FIGURE 2.
- Reinstall the venturi tube by pushing it in. As shown in **FIGURE 3A.**
- Insert Cartridge back into the valve.

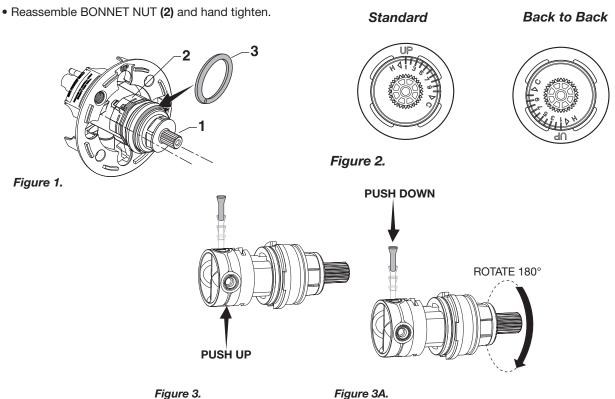

7 CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH. DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

American Standard STUDIO® S PRESSURE BALANCE BATH AND SHOWER TRIM KIT **MODEL NUMBERS** TU105500 TU105501 TU105502 TU105507 TU105508 M919631-YYY0A SHOWER ARM M970255-YYY0A FLANGE & O-RING 1660528.YYY SHOWER HEAD П 1.8 GPM 1660527.YYY SHOWER HEAD M970410-0070A 2.5 GPM CARTRIDGE 078016-YYY0A **ESCUTCHEON SCREWS** M970484-0070A M907052-YYY0A MOUNTING PLATE CARTRIDGE CAP **EXTENSION** M970457-0070A ADAPTER & M962642-0070A SCREW KIT **ESCUTCHEON HOLDER** OFF M970256-YYY0A **ESCUTCHEON PURCHASE SEPARATELY** M970254-YYY0A HANDLE KIT M954805-0070A DEEP ROUGH-IN KIT M970221-0070A SCREW KIT 8888318.YYY **DIVERTER SPOUT** (SLIP-ON) Replace the "YYY" with appropriate finish code POLISHED CHROME 002 HOT LINE FOR HELP For toll-free information and answers to your questions, call: **BRUSHED NICKEL** 295 1 (800) 442-1902 MATTE BLACK 243 Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST Saturday 10:00 a.m. to 4:00 p.m. EST IN CANADA 1-800-387-0369 (TORONTO 1-905-306-1093) Weekdays 8:00 a.m. to 7:00 p.m. EST

IN MEXICO 01-800-839-1200

PART OF LIXIL