WARNING

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN. WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL. ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

CARE AND MAINTENANCE

To clean the outside of the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clean the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slighly damperned clean clorth (use clean water, never a solvent) to wipe the interior surface of the fixture.

Do not use any cleaners with chemical, solvents or harsh abrasives. Use only a dry soft cloth to dust or wipe carefully.

NOTICE& IMPORTANT SAFETY INSTRUCTIONS

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * To reduce the risk of fire, electrical shock or injury to persons or property, please follow the guideline below for safe use and installation
- *The external flexible cable or cord of this luminaire cannot be replaced If the cord is damaged, the luminaire shall be destroyed


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Wire Nut	W	3X	E	Glass Shade		2X
В	Mounting Plate		1X	F	Canopy Screw	•	2X
С	Mounting Screw	Į.	2X	G	Shade Screw	0	6X
D	Lampbody		1X	Н	Bulb	\bigcirc	2X



Model#: JYL9010A

Product Dimensions: 18"LX8"WX11.75"H

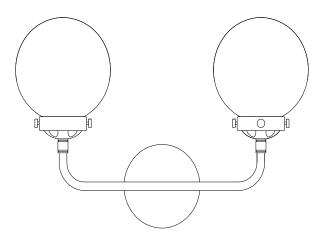


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 20 minutes.

- 1.Separate the Mounting Plate(B) from the Lampbody(D) by removing the Canopy Screw(F) anti-clockwise.
- 2.Attach the Mounting Plate (B) onto the J-box and secure it by turning 2 Mounting Screws (C) clockwise till tight.

Connect, Hot, Black or Red Outlet Supply Wire to:	Connect, Neutral, White Outlet Supply Wire to:		
Black	White		
* Parallel Cord (round & smooth)	* Parallel Cord (square & ridged)		
Clear, Brown, Gold or Black without Tracer (colored stripes)	Clear, Brown, Gold or Black with Tracer (colored stripes)		
Insulated Wire (not green) with copper metal conductor	Insulated Wire (not green) with Silver metal conductor.		




*Note: When parallel wire (SPT I & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See Illustration on left.)

Grounding Instructions:

- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw(F) on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.
- 3.Attach the Canopy of the Lampbody(D) to the Mounting Plate (B) and fix it by turning the Canopy Screw (F) clockwise.
- 4. Unscrew the 6 Shade Screws(G) from the Lampbody(D).
- 5. Insert the bulbs (H) into the Sockets. Be sure to use light bulb(H) with wattage no greater than specified on this fixture. Make sure that electrical current is turned off before changing bulbs.

PLEASUE USE TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 13-WATT OR LED MAX 9-WATT OR TYPE"G" EDISON BULB 40-WATT THERE ARE 2 X 25W EDISON BULB IN THE BOX.

6.Place the Glass Shades(E) over the sockets and fix them in place by turning the Glass Screws(G) clockwise till tight.

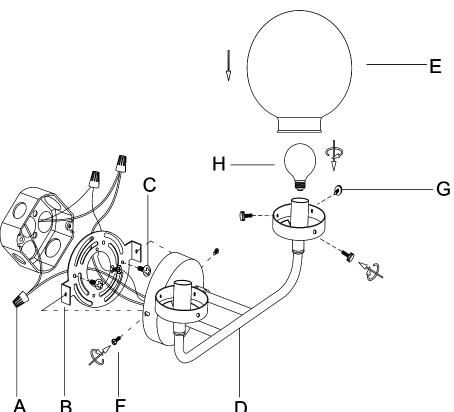

ENJOY YOUR LAMP